

MAGIC TH6

Chat Functionality

Date: 25.02.2019

Contact:


Phone	+49 911 5271-110
Email	support@avt-nbg.de

- Basics
 - Chat is available with software version V 3.030
 - Chat can be configured for each control PC
 - Up to 8 x PCs can control MAGIC TH6
- Configuration
 - Local Settings
 - Operation Settings
- Operation
 - Chat is realised as additional list, called Chat
 - Free positioning, adjustable size

Chat Functionality

- Chat

- Select “Show Chat”:
Enables the chat list
- Select “Play file” and
enter the location where
the file is stored:
A stored file (wave file)
will be played to
indicate the reception of
a chat
- Select “Flash”:
The chat list will be
flashed to indicate the
reception of a chat.
- Select “Pop up window”:
The chat window pops
up when a chat
message arrives.

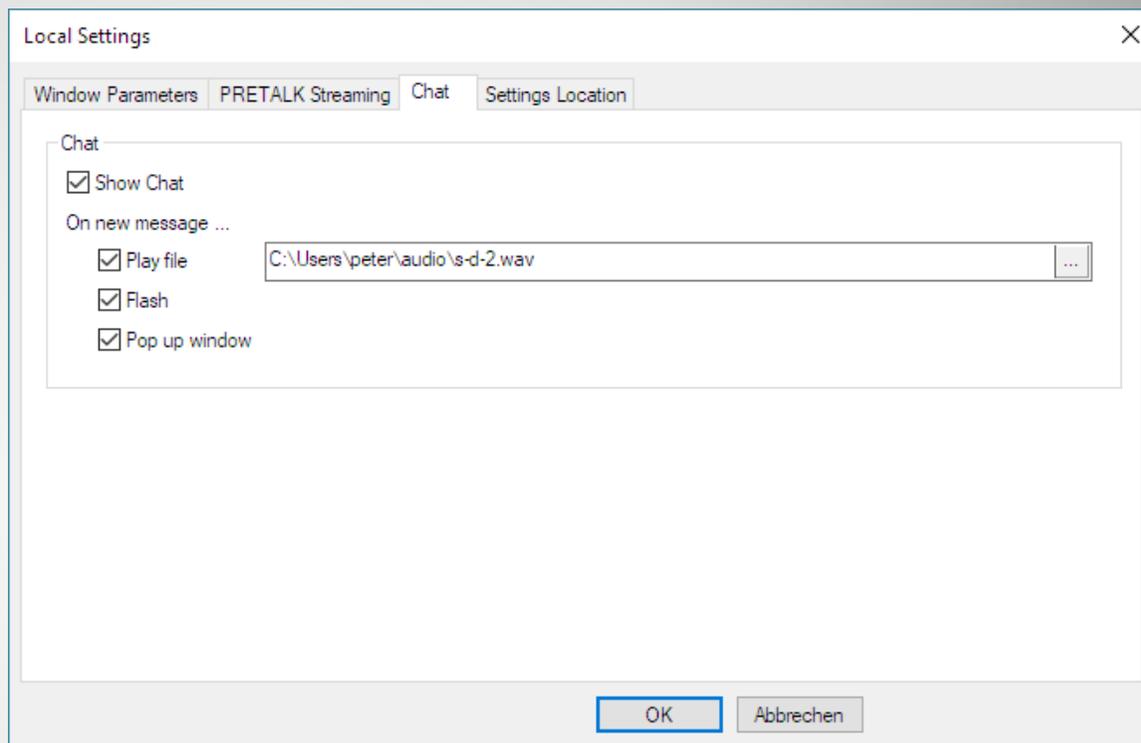

Chat Configuration - Local Settings

- Mode & Audio Line
 - Extension of the Audio Line assignment by a new column, denoted by Chat Name
- Chat Name
 - A chat name can be added to each control PC

The screenshot shows the 'Configuration' window with the 'Mode & Audio Line' tab selected. The left sidebar shows a tree view with 'Operation Settings' expanded to 'Mode & Audio Line'. The main area contains two sections: 'Mode' and 'Audio Line Assignment'.

Mode Section:

- Operation Mode: Studio: One Fader
- PRE TALK Conference:
- ON AIR Conference:
- Anonymous Calling:
- Studio 1 first channel: 1
- channels: 6
- Voice Disguise:
- ON AIR Sharing:

Audio Line Assignment Table:


Studio	Name	Audio Line	Audio Interface	AES67 Rx	No Input Alarm	ON AIR Access	Custom Label	Chat Name
1	PRE 1	PRE TALK Keypad 1	Handset 1			<input checked="" type="checkbox"/>		
1	PRE 2	PRE TALK Keypad 2	Handset 2			<input checked="" type="checkbox"/>		
1	PRE 3	PRE TALK PC 1	AES/EBU 2 Left		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		moderator
1	PRE 4	PRE TALK PC 2	not used			<input checked="" type="checkbox"/>		PC2
1	PRE 5	PRE TALK PC 3	not used			<input checked="" type="checkbox"/>		PC3
1	PRE 6	PRE TALK PC 4	not used			<input checked="" type="checkbox"/>		PC4
1	PRE 7	PRE TALK PC 5	not used			<input checked="" type="checkbox"/>		PC5
1	PRE 8	PRE TALK PC 6	not used			<input checked="" type="checkbox"/>		PC6
1	PRE 9	PRE TALK PC 7	IP Audio Stream 1			<input checked="" type="checkbox"/>		screener
1	PRE 10	PRE TALK PC 8	not used			<input checked="" type="checkbox"/>		PC8
1	AIR 1	ON AIR	AES/EBU 1 Left		<input checked="" type="checkbox"/>			
1	HLD	HOLD/Monitoring	not used					
1	AIR 2	ON AIR 2	AES/EBU 1 Right		<input checked="" type="checkbox"/>			

Caution: Invalid settings are red! Settings for this client have dark gray background colour.

Buttons: OK, Abbrechen, Apply Now, Default Settings


Chat Configuration – Mode & Audio Line

- Activation of the chat list by
 - Selecting SHOW LISTS
 - Selecting the list name until “CHAT” is indicated
- Content of the chat list
 - Entering of a message in the input box
 - Response is indicated with date and PC name

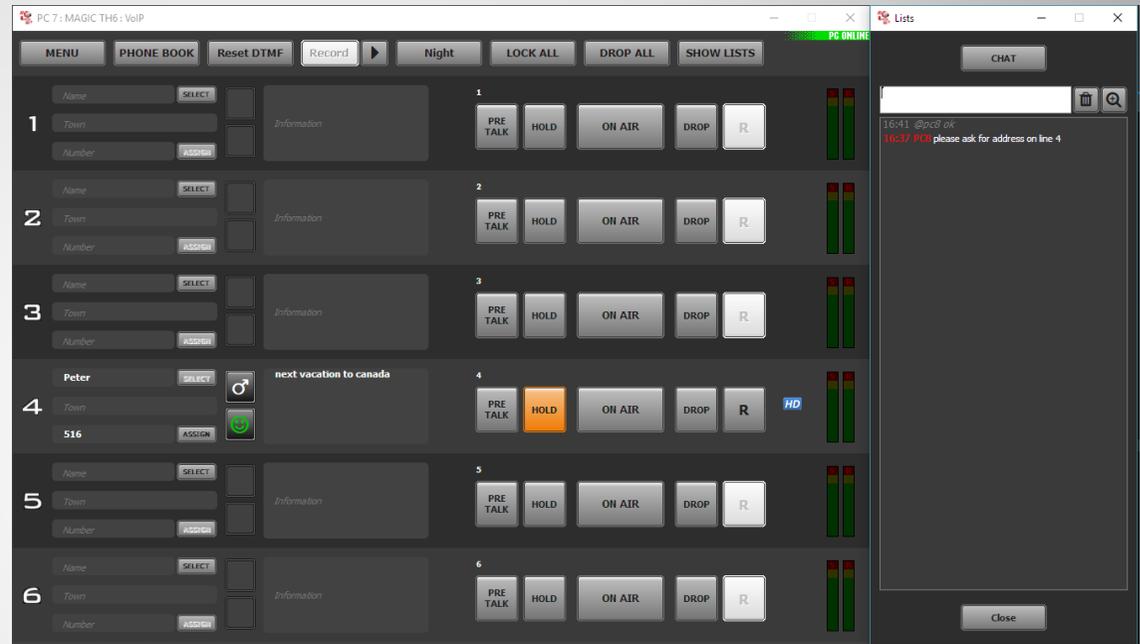


Display of Chat List (1)

- Size of chat list
 - The size of the chat list can be adjusted
- Location of chat list
 - Free positioning of the chat list

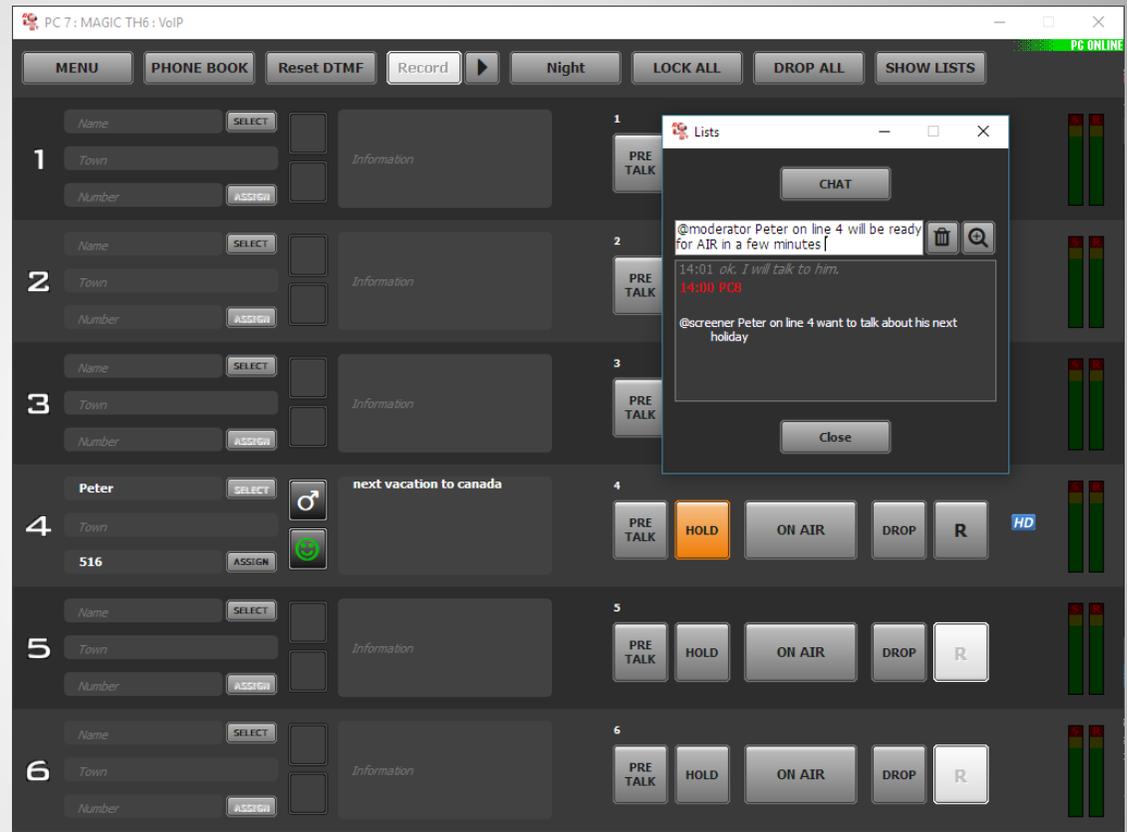

Display of Chat List (2)

- Input box
 - Chat to all connected PCs: Just entering the text message
 - Chat to a specific PC: Entering PC name and text message
- Chat window
 - Display of transmitted chats in grey colour
 - Received chats are displayed with time and PC name in red colour and text in white colour
 - 3 different text sizes can be selected using the magnifying glass symbol
 - The chat display can be deleted selecting the garbage bin.

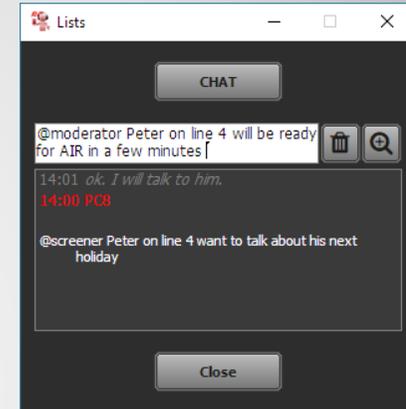

Chat Window