

MAGIC AE1 DAB

DAB Audio Encoder

Hardware/Software Manual



MAGIC AE1 DAB

DAB Audio Encoder

Hardware/Software Manual

A publication of:

AVT Audio Video Technologies GmbH
Nordostpark 12
D-90411 Nuernberg
Germany
Phone : +49 911 5271-0
Fax: +49 911 5271-100
Support : support@avt-nbg.de

Printed in Germany, August 2006
© AVT Audio Video Technologies GmbH

All rights reserved. Reproduction in whole or
in parts is prohibited without the written
consent of AVT Audio Video Technologies
GmbH.

Subject to changes.

Release date: (08.06)

Content

	INTRODUCTION	11
	SAFETY	13
	Introduction	13
	General safety requirements	13
1	CONSTRUCTION	15
2	SYSTEM DESCRIPTION	17
2.1	Functionality	17
3	PUTTING THE SYSTEM INTO OPERATION	19
3.1	Mounting	19
3.2	Connection to the mains voltage	19
3.3	Earthing of the system	19
3.4	Operational elements on the front side	20
3.5	Wiring diagram	21
4	OPERATION VIA DISPLAY AND KEYPAD	23
4.1	Standard functions	23
4.2	Basic configurations	23
4.2.1	Setting the Audio interface: Analogue or digital	24
4.2.2	Configuring of the ISO/MPEG Encoder	24
4.2.3	Activating and configuring the PAD interface	25
4.3	The Status Display - Operation during a connection	26
4.4	Working with Presets	27
5	WINDOWS PC SOFTWARE	29
5.1	Hardware requirements	29
5.2	Installing the Windows PC Software	29
5.3	MAGIC AE1 DAB main window	30
5.3.1	Operating elements	31
5.4	Menu file	32
5.4.1	Operation Settings Presets	32
5.4.2	Basic Settings	32
5.4.3	Submenu Exit	32
5.5	Menu Configuration	33
5.5.1	Submenu COM Port	33

5.5.2	Submenu MAGIC AE1 DAB	34
5.5.2.1	Operation Settings	34
5.5.2.1.1	MPEG Parameter	34
5.5.2.1.2	PAD Interface	36
5.5.2.2	Basic Settings	37
5.5.2.2.1	General	37
5.5.2.2.2	Audio Interface	39
5.5.2.2.3	Relay / TTL	40
5.5.2.3	Login	44
5.5.2.4	Date and Time	46
5.5.3	Submenu Presets	47
5.5.3.1	Manage Presets	47
5.5.3.2	Activation of a Preset	48
5.6	Menu Administration	49
5.6.1	Submenu Registration	49
5.6.2	Submenu File System	51
5.6.3	Submenu System Panel	52
5.6.4	Submenu Software Download	53
5.6.5	Submenu Set Factory Settings	54
5.7	Menu Extras	55
5.7.1	Submenu System Monitor	55
5.8	Menu Help	57
5.8.1	Submenu About MAGIC AE1 DAB	57
A1	MENU STRUCTURE	59
A1.1	Basic Settings	60
A1.2	Operation Settings	61
A1.3	Presets	62
A1.4	Status Information	63
A1.5	Login	64
A2	INTERFACES	65
A2.1	Control and data interfaces	66
A2.1.1	DATA/CONTROL interface	66
A2.2	ISDN interface	68
A2.3	LAN interface	68
A2.4	X.21 interface	69
A2.5	TTL/RELAY interface	70
A2.6	Audio interfaces	71
A2.6.1	Analogue Audio interface	71
A2.6.2	Digital AES/EBU Audio interface	71
A2.6.3	HEADSET/MIC interface	72
A3	TECHNICAL DATA	73

A4	GENERAL	75
A4.1	Ordering numbers	75
A4.2	Scope of delivery	75
A4.3	Declaration of Conformity	75
A5	SERVICE INFORMATION	77
A5.1	Software Updates	77
A5.2	Support	77
A5.3	Repairs	77
	INDEX	79
	DECLARATION OF CONFORMITY	83

INTRODUCTION

The system **MAGIC AE1 DAB** is implemented as DAB Audio Encoder and has analogue and digital AES/EBU audio interfaces. For monitoring each system contains an own decoder which allows a control of the system and to asses the audio quality.

The ISO/MPEG2 Layer II audio encoder is an implementation of the IRT (Institut für Rundfunktechnik) in Munich.

The configuration of the system can be carried out via the Windows application included in delivery or via the front keypad and display of the unit.

S A F E T Y

Introduction

The unit described has been designed to the latest technical parameters and complies with all current national and international safety requirements. It operates on a high level of reliability because of long-term experience in development and constant and strict quality control in our company.

In normal operation the unit is safe.

However, some potential sources of danger for person, material and optimal operation remain - especially if daily routine and technical errors coincide.

This manual therefore contains basic safety instructions that must be observed during configuration and operation. It is essential that the user reads this manual before the system is used and that a current version of the manual is always kept close to the equipment.

General safety requirements

To keep the technically unavoidable residual risk to a minimum, it is absolutely necessary to observe the following rules:

- Transport, storage and operation of the unit must be under the permissible conditions only.
- Installation, configuration and disassembly must be carried out only by trained personnel on the basis of the respective manual.
- The unit must be operated by competent and authorised users only.
- The unit must be operated in good working order only.
- Any conversions or alterations to the unit or to parts of the unit (including software) must be carried out by trained personnel authorised by the manufacturer. Any conversions or alterations carried out by other persons lead to a complete exemption of liability.
- Only specially qualified personnel is authorised to remove or override safety measures, and to carry out the maintenance of the system.
- External software is used at one's own risk. Use of external software can affect the operation of the system.
- Use only tested and virus-free data carriers.

Text Conventions

In this manual the following conventions are used as text markers:

Accentuation: Product names or important terms

LCD TEXT: Labelling on the front display of the system

PC Text: Labelling in the PC Software

TIP

The symbol **TIP** marks information which facilitates the operation of the system in its daily use.

NOTICE

The symbol **NOTICE** marks general notes to observe.

ATTENTION



The symbol **ATTENTION** marks very important advice that is absolutely to observe. In case of non-observance disfunctions and even system errors are possible.


1 CONSTRUCTION

The functions of the **MAGIC AE1 DAB** are implemented in a single unit. The system is additionally equipped with a module for MPEG Coding. The system is designed for mounting in a 19" rack (1 U). 19" brackets are part of the delivery.

FIG. 1 FRONT VIEW: MAGIC AE1 DAB DAB AUDIO ENCODER



The functional elements of the system are pictured in Fig. 2.

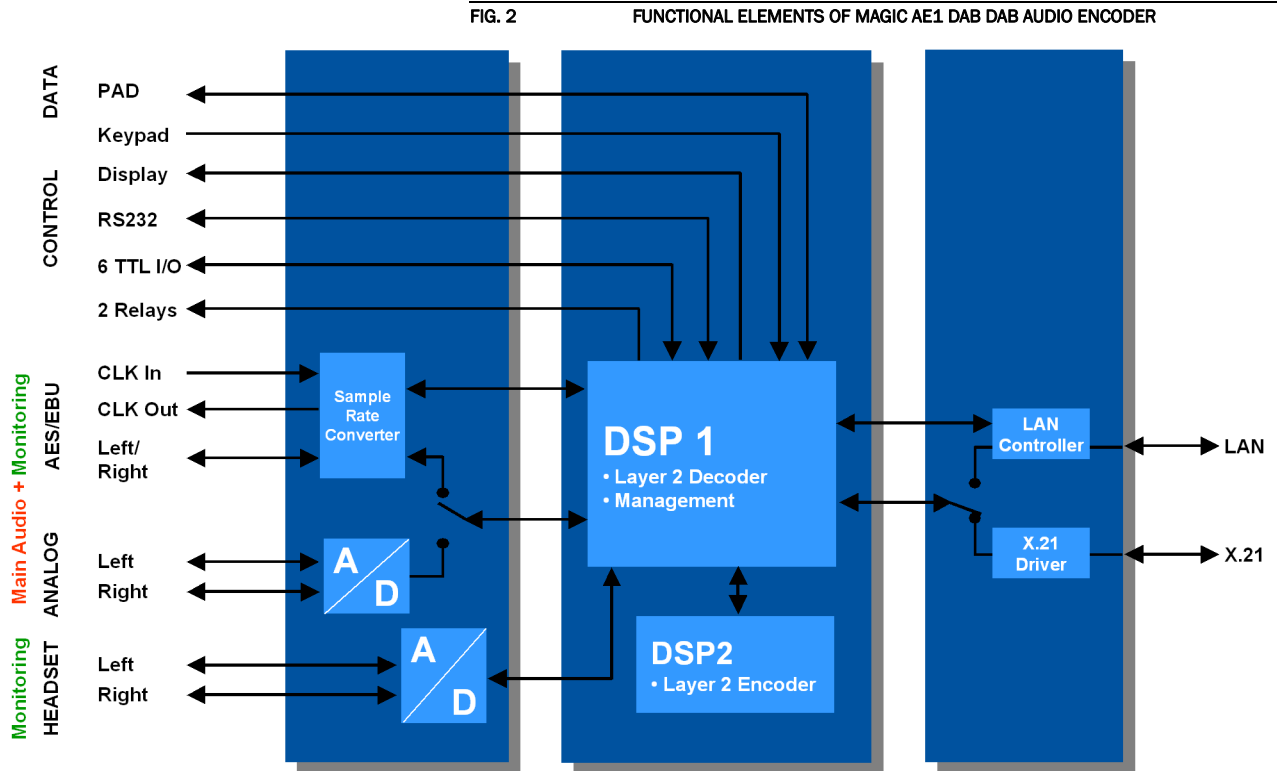

2.1

Functionality

The *MAGIC AE1 DAB* System incorporates a *X.21* interface¹ for a direct connection to the e.g. *DM-001* Ensemble Multiplexer from Rohde & Schwarz. The *X.21* clock is derived from the Ensemble Multiplexer clock.

The complete signal processing is taken over by two digital signal processors. In this way the following functions are realised:

DSP1:

- ISO/MPEG2 Layer II Decoder
- digital audio router
- Signalling management
- Control of the complete system (Keypad, display, relays, TTL, RS232)
- PAD multiplexer

¹ The LAN interface for control & management will be supported in a later release.

DSP2:

- ISO/MPEG2 Layer II Encoder

Via the main audio channel the high quality Stereo or Mono audio signal is inserted analogue or digitally. If the digital AES/EBU audio interface is used, two separate Sample Rate Converters are available for automatic clock synchronisation between network and audio source. For external clocking a clock input and a clock output are available.

The audio outputs can be used for monitoring purposes. The encoded signal is looped at every time to the MPEG decoder. The decoded audio signal is available as analogue or digital audio output. As second audio monitoring interface a headphone interface is available.

The configuration and operation can be primarily carried out via the **front keypad** and the illuminated **display**.

Configuration and control is especially comfortable with the **MAGIC AE1 DAB Windows PC Software** which is included in delivery and which communicates with the system via the RS232 interface¹.

Six programmable **TTL contacts** can be used for external signalling. Two **relays** are available for status indication.

¹ LAN control is planned.

3 PUTTING THE SYSTEM INTO OPERATION

3.1 Mounting

With its dimensions (W × H × D) of 431 mm × 44,5 mm (1 U) × 250 mm the **MAGIC AE1 DAB** system can be used either as desktop device or mounted in 19 inch racks. Corresponding 19" mounting brackets are included in delivery.

When mounting the unit please keep in mind that the bending radius of the cables is always greater than the minimum allowed value.

When the **MAGIC AE1 DAB** audio encoder is installed, please make sure that there is sufficient ventilation: It is recommended to keep a spacing of ca. 3 cm from the openings. In general, the ambient temperature of the system should be within the range of +5°C and +45°C. These thresholds are especially to observe if the system is inserted in a rack. The system works **without** ventilation.

TIP

The system temperature can be indicated on the display (**MENU STATUS INFORMATION** (see CHAPTER A1.4, Page 63))

During operation air humidity must range between 5% and 85%.

ATTENTION



Incorrect ambient temperature and humidity can cause functional deficiencies

Operation outside the threshold values indicated above leads to a loss of warranty claim.

3.2 Connection to the mains voltage

The system can be operated with mains voltages in the range from 90 V to 253 V. The frequency can vary from 45 Hz to 65 Hz. The maximum power consumption is 15W (typically 12W).

After plugging the mains connector and switching on the system boots within a few seconds. In standby mode the **MAGIC AE1 DAB** logo is shown on the display.



3.3 Earthing of the system

For EMC reasons an earthing via the earthing screw of the system is recommended.

ATTENTION



Earthing

A lacking earthing can cause functional deficiencies within the unit.


3.4 Operational elements on the front side

The system has an illuminated graphical display with a resolution of 160 x 32 Pixels and 19 operating buttons.

On the right next to the display there are two softkeys whose current functions are indicated on the display. In the middle there are two buttons for navigation (⤴ and ⤵), two buttons for establishing (☎) /dropping (📞) connections as well as an **OK** button. The numerical pad supports in addition to the numerics **0...9** the '*' and '#' key. For text entries the numerical pad can also be used as normal keypad.

The operation is similar to standard mobile telephones.

FIG. 3 OPERATIONAL ELEMENTS ON THE FRONT SIDE

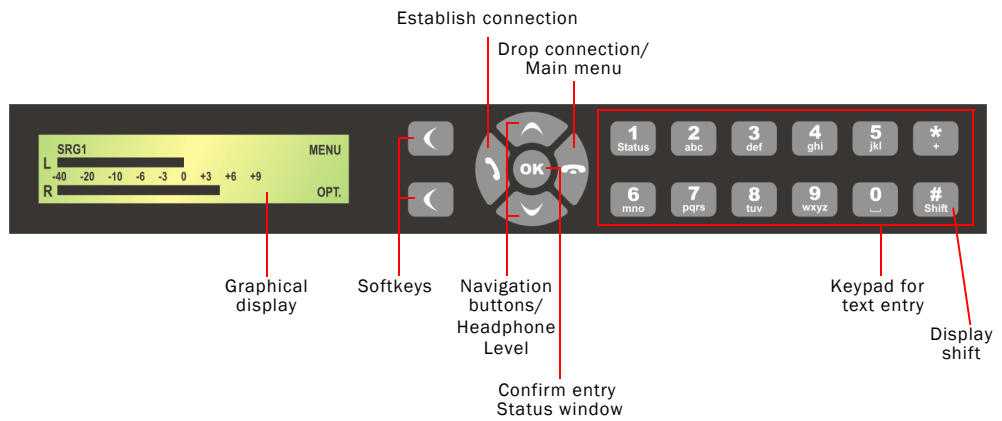


3.5

Wiring diagram


The figure below show the typical wiring diagram of a DAB system.

FIG. 4 WIRING DIAGRAM

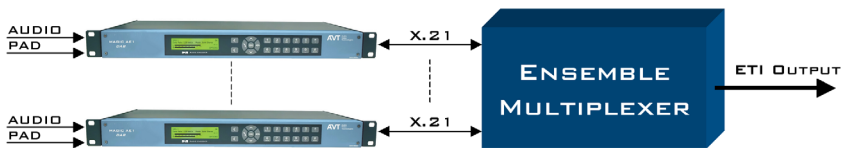

The standard interfacing of the system is shown Fig. 5.

FIG. 5 WIRING & CONNECTION DIAGRAM

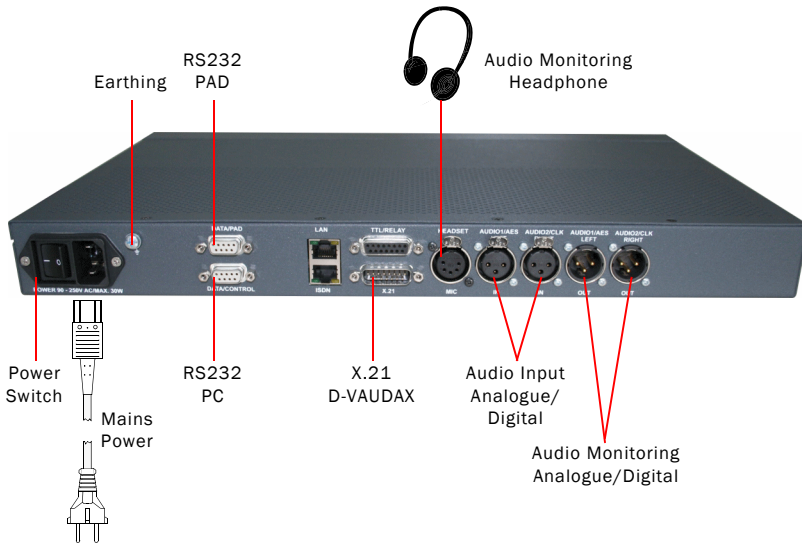

4 OPERATION VIA DISPLAY AND KEYPAD

In this chapter all basic configurations for the operation of the **MAGIC AE1 DAB** system are explained. An overview of the menu structure you will find in the annex under CHAPTER A1.

Of course, all configurations can also be comfortably made via the **MAGIC AE1 DAB Software** included in delivery.

NOTICE

For the details of most functions please see the PC Software description from CHAPTER 5.

4.1 Standard functions

Keypad lock

To avoid that keys are pressed accidentally you can enable a keypad lock. For activation please press the **MENU** key followed by the * (star) button. If the keypad lock is enabled the display illumination is turned off immediately.

The keypad lock is deactivated by entering the key sequence **MENU *** a second time.

Softkey Menu

Using the softkey **MENU** you can change all parameters of the system at any time. The menu structure is given in CHAPTER A1.1 ... CHAPTER A1.5 (see Page 60).

4.2 Basic configurations

In the following some specific basic configurations of **MAGIC AE1 DAB** are described in detail.

NOTICE

All menus can be reached directly via a **QuickMenu** key sequence. For this purpose each menu item is marked with a cypher in the upper left corner (in the example on the left it is e. g. 3). To reach a certain menu directly please enter from the main menu the key sequence **MENU <DIGIT> <DIGIT>** whereby <digit> marks the respective menu reference number. Please notice that the menu reference number can change depending on the configuration.


Menu reference number











4.2.1 Setting the Audio interface: Analogue or digital

MAGIC AE1 DAB incorporates analogue as well as digital Audio interfaces which you can adjust separately. The digital **AES/EBU interfaces** have integrated **Sample Rate Converters** to adjust the digital Audio source to the transmission clock. Additionally, clock inputs/outputs are also available. To configure the Audio interface please follow the instructions below:

NOTICE

If you are not in the main menu please press the  button first.

- First press the softkey  **MENU** and select **BASIC SETTINGS** via the softkey  **SELECT**.
- With the use of the **SELECT** softkey you reach the option **AUDIO SETTINGS**.
- Please mark the option **AUDIO INPUT** or **AUDIO OUTPUT** using the cursor keys  and  and press again **SELECT**. Now the options **ANALOGUE** and **DIGITAL** are displayed.
- Select the desired interface with the help of the cursor keys  and  and by pressing the softkey **SELECT**.
- Confirm your entry by pressing the  button or the softkey **OK**.
- To get back to the main menu please press the  button. Now you are asked if you want to **SAVE SETTINGS?** Via the softkey **YES** the setting is stored permanently in the system.




TIP





You reach the settings for the **AUDIO INPUT** or **AUDIO OUTPUT** via the key sequence: **MENU 111** or **MENU 112**

4.2.2 Configuring of the ISO/MPEG Encoder


All settings of the encoder behaviour can be configured under the menu **MPEG PARAMETER**. For more information please refer to CHAPTER 5.5.2.1.1, Page 34.

NOTICE

If you are not in the main menu please press the  button first.

- First press the softkey  **MENU** and select **OPERATION SETTINGS** via the softkey  **SELECT**.
- With the use of the **SELECT** softkey you reach the option **MPEG PARAMETER**.
- Please mark the option **MAX MONO RATE** using the cursor keys  and  and press again **SELECT**. Now the desired maximum Mono data rate can be set.
- Confirm the selection with **SELECT** and press **OK**.
- Select now **MAX LSF RATE** to configure the maximum data rate using the Low Sampling Frequency (LSF)¹ option. If you don't want to use LSF select the lowest possible data rate.
- Confirm the selection with **SELECT** and press **OK**.

¹ Using LSF (24-kHz) increases the audio quality especially for lower bitrates. We recommend to use LSF for data rates lower than 64-kbit/s.

- To configure the desired Mono mode select the menu **MONO MODE**. Three possibilities are available: **MONO L+R/2**, **MONO LEFT**, **MONO RIGHT**.
- Confirm the selection with **SELECT** and press **OK**.
- Please mark now the option **STEREO MODE** and select the desired Stereo mode: **STEREO**, **JOINT STEREO**, **DUAL CHANNEL**.
- Confirm the selection with **SELECT** and press **OK**.
- To get back to the main menu please press the  button. Now you are asked if you want to **SAVE SETTINGS?** Via the softkey **YES** the setting is stored permanently in the system.


TIP










You reach the settings for the **MPEG PARAMETER** via the key sequence: **MENU 2 1**.

4.2.3**Activating and configuring the PAD interface**

To enable the transmission of PAD you must activate the PAD mode and configure the right baudrate. For more information please refer to CHAPTER 5.5.2.1.2, Page 36.

NOTICE

If you are not in the main menu please press the  button first.

- First press the softkey  **MENU** and select **OPERATION SETTINGS** via the softkey  **SELECT**.
- With the use of the **SELECT** softkey you reach the option **PAD INTERFACE**.
- Please mark the option **ACTIVATE PAD** using the cursor keys  and  and press again **SELECT**. Now the option **ACTIVE** can be set to activate the PAD interface.
- Press the softkey  **BACK** and select then **BAUDRATE**. After pressing the softkey **SELECT** you can configure the desired baudrate (**38400**, **57600**, **115200**), which must be consistent to your PAD inserter.
- Confirm the selected baudrate with **SELECT**.
- Select the desired interface with the help of the cursor keys  and  and by pressing the softkey **SELECT**.
- Confirm your entry by pressing the  button or the softkey **BACK**.
- To get back to the main menu please press the  button. Now you are asked if you want to **SAVE SETTINGS?** Via the softkey **YES** the setting is stored permanently in the system.

TIP


You reach the settings for the **PAD INTERFACE** via the key sequence: **MENU 2 2**.

4.3

The Status Display - Operation during a connection

TIP

The status window can always be reached by pressing the **OK** button.




When the connection is established the level meter as well as the status for the selected monitoring signal is displayed.

In the first row the program name, audio bitrate, coding mode (M=Mono, S=Stereo, D=Dual Channel, J=Joint Stereo) and PAD bitrate (in kbit/s) is shown.

Softkey Monitor (*MON.*)

During a connection you can switch via the softkey *MON.* between original audio signal which is feed into the encoder and the decoded audio signal. Both the audio output (XLR) and the headphone will be switched to the selected audio signal. The display shows the monitoring status as follows:

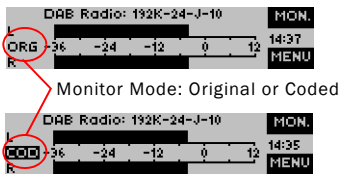

- *ORG*, if you monitor the audio input signal
- *COD*, if you monitor the coded audio signal




Softkey Menu


Using the softkey *MENU* you can change all parameters of the system at any time.

Headphone Level


If a connection is established you can adjust the headphone level with the navigation buttons  and . The current selected level will be shown in the display.



Dropping a connection

The connection is dropped by pressing the telephone receiver button . If no connection exists, the main menu is displayed after a few seconds. To avoid errors you must confirm the drop request.

Establishing a connection

The connection is normally establishing automatically if a clock is available on the X.21 line interface. After dropping a connection manually you can reconnect the line by pressing the telephone receiver button .


4.4

Working with Presets



The **MAGIC AE1 DAB** differentiates between **BASIC SETTINGS** and **OPERATION SETTINGS**.


Basic Settings are settings that do **not** change during normal operation like e.g. display contrast, date/time etc. These parameters **cannot** be saved as preset since a configuration is usually only required when the system is put into operation.

Operation Settings need to be reconfigured depending on the application. To easily recall recurring configurations you can store up to 10 presets in the system.

You reach the menu for the Presets by pressing the **MENU** softkey once, the cursor key  twice and by pressing the softkey **SELECT** once as confirmation.

In the input field **PRESETS** you can search for a certain Preset. As soon as you enter a character, the corresponding entries of the Preset list are filtered out.

Alternatively, you can select a Preset from the list using the cursor keys  and .

If you now press the  button, the selected Preset is loaded immediately.

By the softkey **OPT.** (Options) the following functions which you can select via the softkey **SELECT** are realised:

- **LOAD:** The stored Preset is loaded.
- **NEU:** With the help of this function you can create a new Preset. All current Operation Settings are stored.
- **SAVE:** The currently selected Preset is overwritten with the current Operation Settings. For safety reasons a confirmation is required.
- **DELETE PRESET:** The currently selected Preset is deleted. For safety reasons a confirmation is required.

NOTICE

If the configuration has changed, you are asked if you want to **SAVE SETTINGS?** when you leave the Preset menu. Via the **YES** softkey the configuration is stored permanently in the system. This Preset is loaded automatically by the system after the unit is connected to the power supply.



5 WINDOWS PC SOFTWARE

The configuration of the system is particularly comfortable via the Windows PC Software included in delivery.

5.1 Hardware requirements

The PC must meet the following minimum requirements:

- IBM PC AT, IBM PS/2 or 100% compatible
- Pentium Prozessor (> 1 GHz) recommended
- Windows 2000/XP
- ca. 600 kByte available RAM
- 5 MB available hard disk space
- Screen resolution with 800 x 600 Pixels
- at least one available serial interface RS-232
- Microsoft, IBM PS/2 or 100% software compatible mouse

5.2 Installing the Windows PC Software

Please insert the CD included in delivery in your CD-ROM drive. The software automatically starts your Internet browser. Possible safety warnings can be ignored for the moment. Please press under **Install Software** the **MAGIC AE1 DAB** button. Subsequently, the setup program is executed.

Alternatively, you can install the software directly from the CD. You will find the installation file **setup.exe** in the folder **Software\MAGIC AE1 DAB** on the CD.

Please follow the instructions of the installation routine.

After the installation the software can be started by clicking on the **MAGIC AE1 DAB** icon.

Please connect your PC via a serial 1:1 cable (only Pin 2 and Pin 3 are used, Pin 5=ground) with the system.

The standard **COM-Port** settings are: **38400 Baud**

Operation via Windows PC software

In the following chapters all functions of the PC software are described in detail.

5.3 MAGIC AE1 DAB main window

After starting the **MAGIC AE1 DAB** application, the main window is displayed automatically (see Fig. 6).

The connection status between PC and system is displayed in the top right corner of the window:

PC ONLINE: Connection is okay.

NO CONNECTION: Connection with PC is faulty

Following further status messages are possible:


PC ONLINE ALARM: Upcoming alarm (see **System Monitor**, green-dark green blinking)

NOTICE

If the connection is faulty, please check the following points:

- External power supply of the system is plugged in (display available)
- Serial 1:1 cable is connected with PC and system
- Correct COM port and same baud rate are selected in the software as well as in the system (**Configuration** → **COM Port**, see Page 49)

FIG. 6 MAIN WINDOW OF THE MAGIC AE1 DAB DAB AUDIO ENCODER SOFTWARE

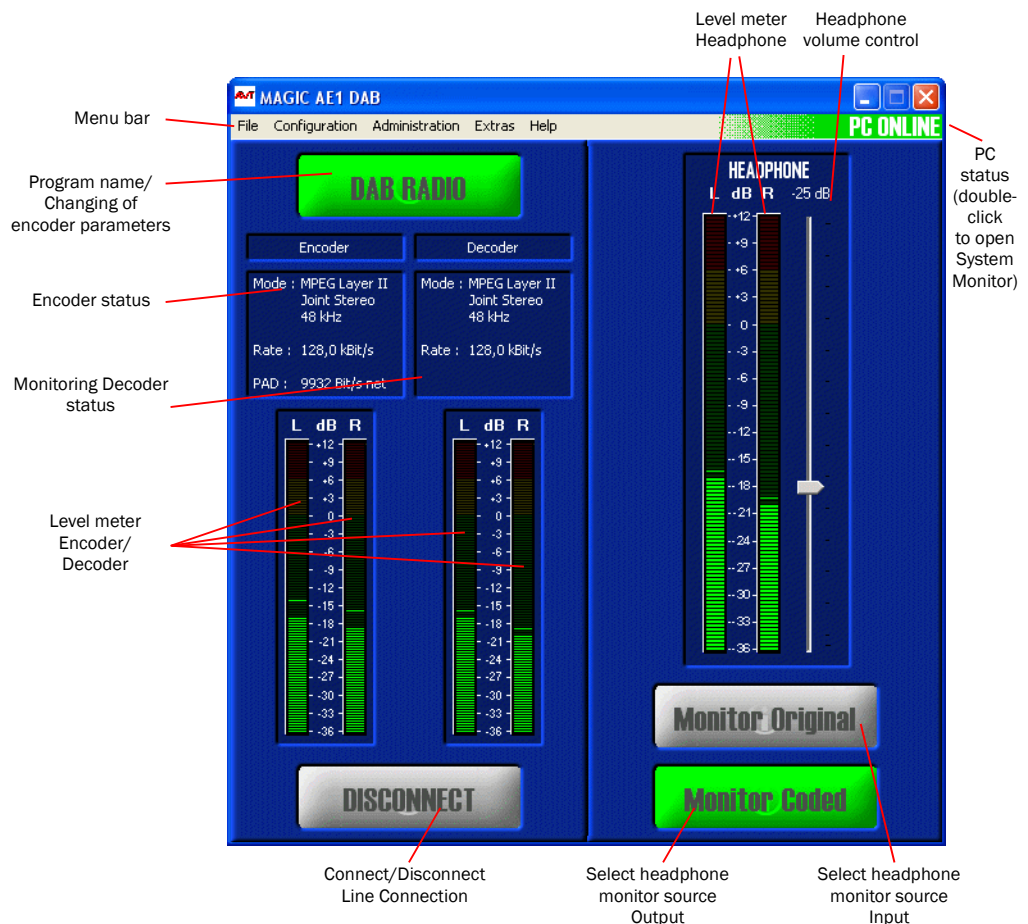

5.3.1 Operating elements

Program button



On the **Program** button the information about the current program is shown. The program name can be configured via **Configuration** → **Basic settings** → **General** → **Program Name** (see Page 38).

By pressing the button it is possible to change the encoder parameter on the fly.

Connect/Disconnect button



To stop the transmission you can press the **Disconnect** button. For security reasons you must confirm

Monitoring Input/Output



Via the **Monitoring Input** and **Output** buttons you can select the source for the headphone. The currently selected source is highlighted in green.



To adjust the headphone level use the **Headphone Volume Control**, which allows an adjustment in a range of -40 ... 0 dB.

5.4 Menu file

FIG. 7 MENU FILE



5.4.1 Operation Settings Presets

To **Import/Export** the different presets please use the submenu **Operation Settings Presets**. The file format is binary and cannot be edited.

5.4.2 Basic Settings

To **Import/Export** the system configuration please use the submenu **Basic Settings**. The file format is binary and cannot be edited.

5.4.3 Submenu Exit

Via the submenu **Exit** you exit the **MAGIC AE1 DAB** software.

5.5 Menu Configuration


FIG. 8 MENU CONFIGURATION



5.5.1 Submenu COM Port

The system is connected via the serial RS232 interface with a 1:1 connecting cable to a PC. The configuration of the COM Port of the PC can be carried out under **Configuration** → **COM Port**.

FIG. 9 RS232 PARAMETER OF THE COM PORT

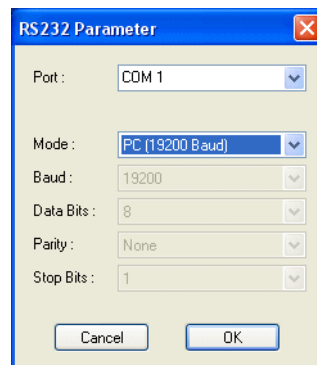

As **Port** you select the interface of your PC which is connected to the **MAGIC AE1 DAB**.

Under **Mode** you can set the desired operating mode:

- **9600 Baud**
- **19200 Baud**
- **38400 Baud**
- **57600 Baud**
- **115200 Baud**

All further parameters like **Data Bits**, **Parity** and **Stop Bits** cannot be configured.

5.5.2 Submenu MAGIC AE1 DAB

Via the submenu **MAGIC AE1 DAB** the system can be configured comfortably. It is distinguished between **Basic Settings**, which do not have to be changed during the operation and the actual **Configuration** for the current application. In contrast to a configuration, the basic settings **cannot** be saved as **Preset** (see CHAPTER 5.5.3).


5.5.2.1 Operation Settings

NOTICE All listed settings made under **Operation Settings** can be saved as **Preset**.

5.5.2.1.1 MPEG Parameter

Via the option **MPEG Parameter** all MPEG settings can be configured in dependence of the bitrate.

FIG. 10 MPEG PARAMETERS

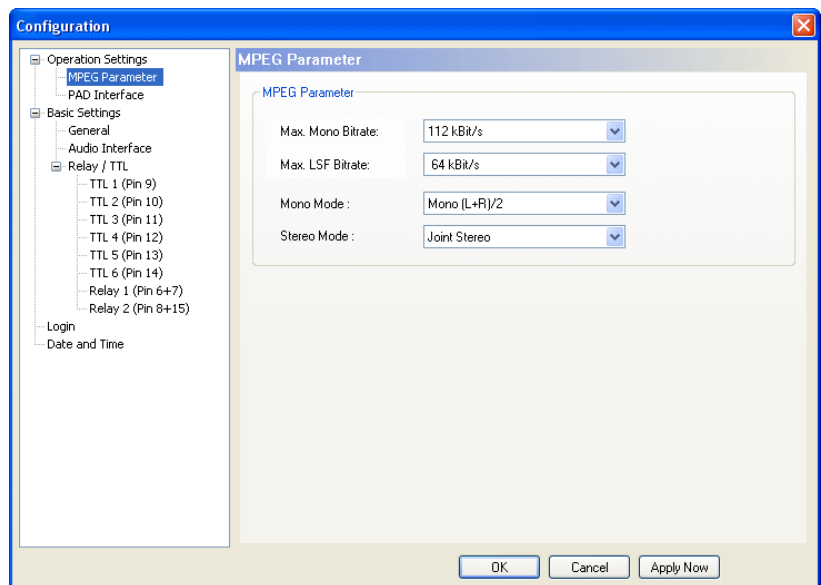

MPEG Parameter

All possible bitrates, modes and sampling frequencies you can see in TAB. 1, Page 35.

- **Max. Mono Bitrate:** With this setting you can define the maximum bitrate for the Mono mode. If the X.21 clock reach this limit, the coding mode will be automatically set to Mono.
- **Max. LSF Bitrate:** With this setting you can define the maximum bitrate for LSF¹ encoding. If the X.21 clock reach this limit, the internal encoder sampling frequency will be automatically set to LSF. Note that the bandwidth will be limited in this case to approximately 12-kHz. LSF is recommended only for lower bitrates.
- **Mono Mode:** This setting allows to configure the Mono mode. Three options are available:
 - **Mono L:** Only the left channel of the audio input will be encoded

¹ LSF= Low Sampling Frequency (24-kHz) instead of 48-kHz.

- **Mono R:** Only the right channel of the audio input will be encoded
- **Mono (L+R)/2:** If you have connected a Stereo signal this setting allows the generation of a Mono signal.
- **Stereo Mode:** This option define the Stereo mode of the encoder. Three possibilities are available:
 - **Stereo:** This mode is recommended for data rates from 192-kbit/s or higher.
 - **Joint Stereo:** This mode offers more efficiency and best quality for stereo signals if the bitrate is 160-kbit/s or lower.

NOTICE

Note that the ISO/MPEG encoder will switch automatically to pure Stereo mode, if the bitrate is adequate. This behaviour you can see on a decoder: An alternate switching between Stereo and Joint Stereo can be recognised. Of course this switching is a feature of the ISO/MPEG Layer II encoder and is not audible.

- **Dual Channel:** There are no audible differences between Stereo and Dual Channel mode. Only the multiplexing as well as the signalling in the ISO/MPEG header is different. Select this mode if you insert totally different signals on the left and the right channel.

TAB. 1 POSSIBLE DATA RATES AND MODES

Bitrate kbit/s	Possible Coding Mode	Possible Sampling Frequency kHz
8	Mono	24
16	Mono	24
24	Mono	24
32	Mono	24, 48
40	Mono	24
48	Mono	24, 48
56	Mono	24, 48
64	All modes	24, 48
80	Mono	24, 48
96	All modes	24, 48
112	All modes	24, 48
128	All modes	24, 48
144	All modes	24
160	All modes	24, 48
192	All modes	48
224	Stereo, Joint Stereo, Dual channel	48
256	Stereo, Joint Stereo, Dual channel	48
320	Stereo, Joint Stereo, Dual channel	48
384	Stereo, Joint Stereo, Dual channel	48

5.5.2.1.2 PAD Interface


Via the configuration **PAD Interface** you can enable the PAD¹ Insertion from an external PAD inserter. The standard settings are compliant to the synchronous frame mode of the **IRT** Recommendation.

The data insertion works dynamically: If data are available the **audio bitrate** will be reduced automatically according the PAD bitrate. Otherwise the full frame is used for audio.

Maximum number of PAD bytes per frame depends on the baudrate:

38400 Baud	54 bytes/frame
57600 Baud	90 bytes/frame
115200 Baud	127 bytes/frame

FIG. 11 PAD INTERFACE

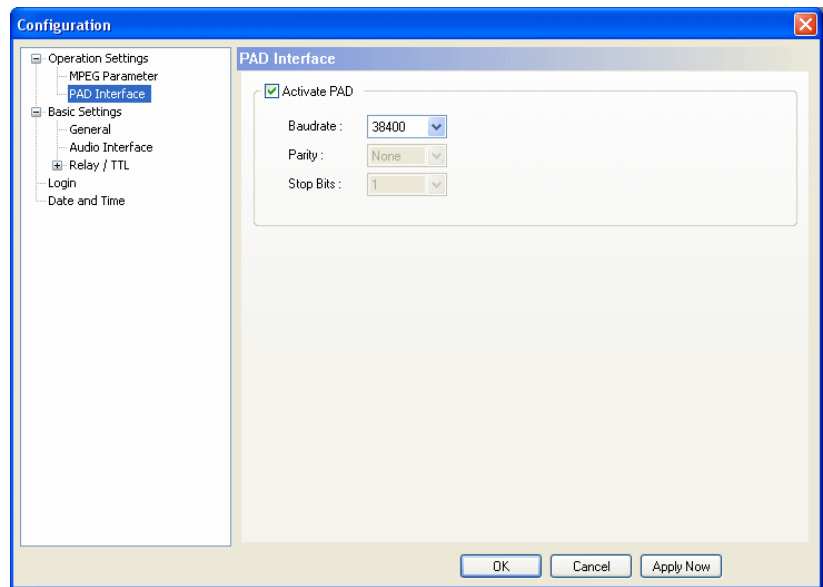

To enable the PAD transmission you must set the option **Activate PAD**. The RS232 interface parameter **Baudrate** must be conform to the connected PAD inserter. Available baudrates are **38400**, **57600**, and **115200** Baud. The **Parity** and **Stop Bits** cannot be changed. The standard settings are: 38400 Baud, Parity None and 1 Stop Bit.


¹ PAD = Program Associated Data

5.5.2.2 Basic Settings

NOTICE All configurations made under **Basic Settings** cannot be saved as **Preset** (see CHAPTER 5.5.3).

5.5.2.2.1 General

FIG. 12 GENERAL

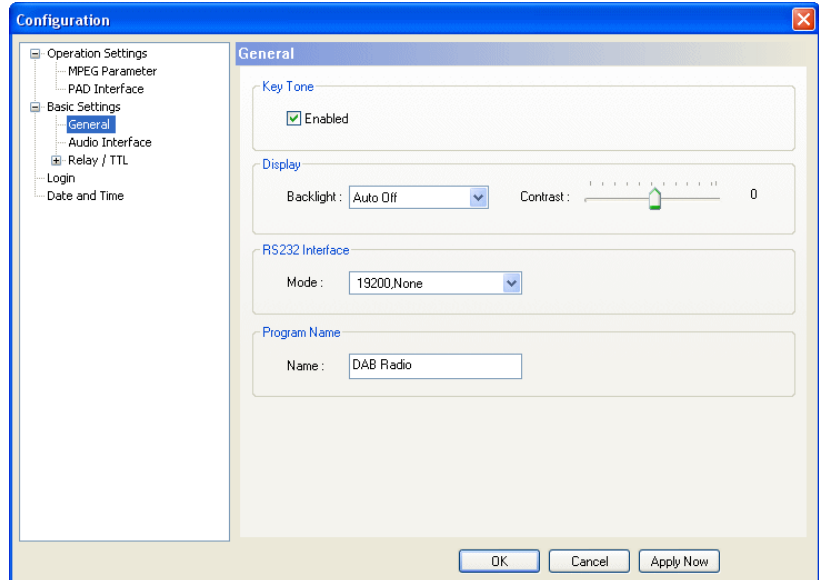**Key Tone**

- To activate the **Key Tone** of the front keypad, check the **Enabled** box.

Display

- The **Display** has a backlight. Under the setting **Backlight** you can switch it **ON** permanently. If you select the option **Auto** the backlight is turned off automatically **60** seconds after the last keystroke. The backlight is activated again by pressing any key (e.g. **OK**).

NOTICE

Please notice that if the keypad lock is activated, the backlight is only switched on again by pressing the key sequence **MENU ***.

- Via the slide control **Contrast** you can adjust the contrast in the range **-16 ... 15** for the display.

RS232 Interface

- If you want to operate the system with the PC, you must set under **Mode** the data rate in accordance with the interface of the system (see CHAPTER 5.5.1, Page 33). There are five baud rates available:
 - **9600, None**
 - **19200, None**
 - **38400, None**
 - **57600, None**

– 115200, None


Program Name

- The entered **Name** of the program will be shown on the **Program button** (see Page 31) in the PC software main window as well as in the status line of the system display.

5.5.2.2.2 Audio Interface

MAGIC AE1 DAB supports analogue as well as digital AES/EBU Audio interfaces. If the digital interfaces are used, a separate Sample Rate Converter is available for the input and the output so that external adjustments are not required if there are different digital sources and drains.

FIG. 13 AUDIO INTERFACE

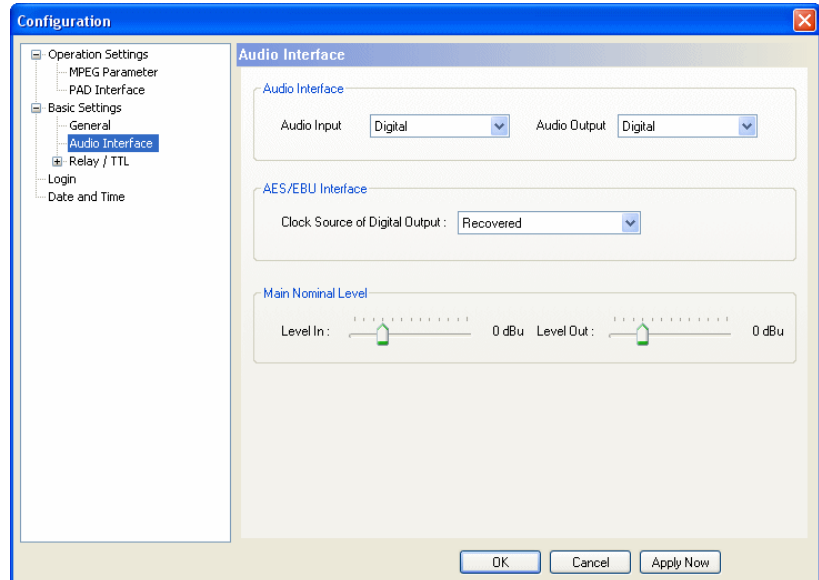

Audio Interface

- The operating mode **analogue** or **digital** can be set separately for the **Audio Input** and the **Audio Output**.
- If the output is set **digital**, additionally the configuration for the **AES/EBU Interface** is displayed. Under **Clock Source of digital output** you can select the following options:
 - **Internal:** The AES/EBU output clock is derived from the internal system clock.
 - **External:** The AES/EBU output clock is derived by the external clock connected via the interface **Audio 2/CLK IN**. The clock rate of the connected clock must be 48-kHz.
 - **Recovered:** The AES/EBU output clock is derived from the digital input signal of the interface **Audio 1/AES IN**. This configuration is usually to be selected if you use the digital input of the system. In this way a synchronous functioning of the transmission chain is ensured

NOTICE

The AES/EBU input always works with recovered clock, therefore a configuration of the output is required.

For clock synchronisation to other systems you can use the Audio output **Audio 2/CLK OUT**. The clock rate of the output clock is 48-kHz.

- If you operate the input or the output in an analogue mode, the corresponding slide control for adjusting the nominal Audio level of the Audio interface (**Main Nominal Level**) is displayed. The nominal level can be adjusted separately for the input (**Level In**) and for the output (**Level Out**) in the range of **-3 ... +9 dBu** in 1-dB steps. The head room is **6 dB** in general. If you want to have the maximum level of 15 dBu for the system, you must set 9 dBu as nominal level. The default settings are 0 dBu.

5.5.2.2.3 Relay / TTL


The **MAGIC AE1 DAB** system incorporates six **GPIO** Pins (TTL) which can be programmed separately as input or output. Additionally, two **Relays** are available.

The operating mode of a TTL-Pin - **Input** or **Output** is selected via the option **Direction**.

The following specification accounts for all three configuration windows **TTL1 ... TTL6**.

TTL-Pin as input

FIG. 14 TTL-PIN AS INPUT

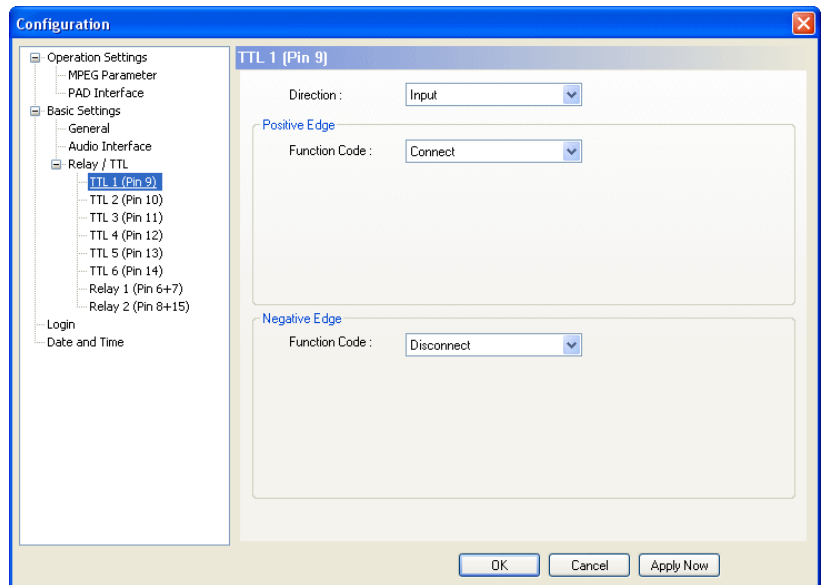

If you use a TTL-Pin as **Input**, you can program two different functions separately when edges change:

- **Positive edge:** The event is activated when the voltage on the TTL-Pin changes from 0V to +5V.
- **Negative edge:** The event is activated when the voltage on the TTL-Pin changes from +5V to 0V.

The following functions can be configured (**Function Code**):

- -: No function, the negative edge is not used.
- **Connect:**
Via this function you can establish a connection.
- **Connect (level triggered):**
Same function as **Connect**, but the event is activated level triggered and not edge triggered.
- **Disconnect:** If you activate this function, a connection can be disconnected.
- **Load Preset:** Via this function it is possible to load a preset which you have to select under **Preset**.
- **Information Base entry:** Reserved for future applications.

- **String Command:** Reserved for future applications.

Example:

You want to connect the X.21 line with TTL 1. After the transmission has been finished the connection is to be cleared with TTL 1.

Programming:


Positive egde:

Function Code: Disconnect

Negative egde:

Function Code: Connect

FIG. 15 SEQUENCE OF EVENTS FOR THE EXAMPLE

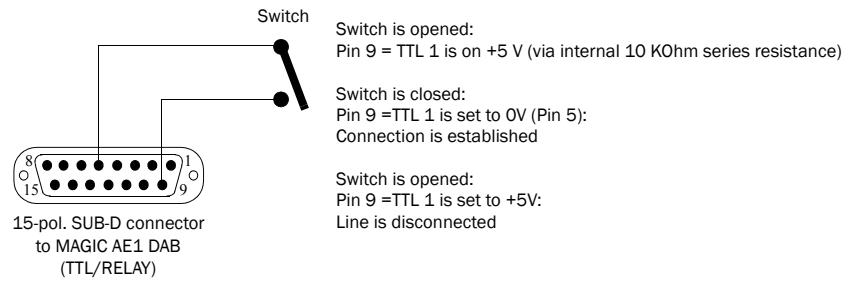


TTL-Pin as Output

ATTENTION



Please pay attention to the maximum switch current of 10 mA respectively the maximum switch voltage of 5V per TTL output.

FIG. 16 TTL-PIN AS OUTPUT

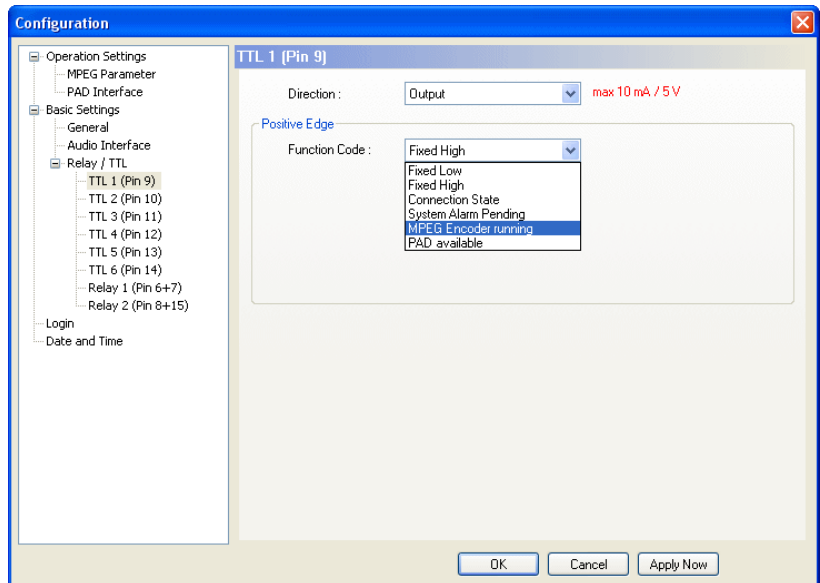

If a TTL-Pin is configured as **Output**, the event is signalled as change of voltage on the TTL-Pin from 0V to +5V.

Under **Positive edge** you can select one of the following **Function Codes**:

- **Fixed to Low (0V)**: The TTL-Pin is set to 0V permanently.
- **Fixed to High (5V)**: The TTL-Pin is set to +5V permanently.
- **Connection State**: Via **Connection State** you can signalise the connection state of a line. The following configurations are possible:
 - **Disconnect**
 - **Connect**
- **System Alarm Pending**: If one of the possible system errors (see CHAPTER 5.7.1) occurs, it can be signalled by selecting this option.
- **MPEG Encoder running**: If the encoder detect **no** error, the TTL-Pin will be set.
- **PAD available**: If the PAD insertion is activated (see CHAPTER 5.5.2.1.2, Page 36) and the encoder receives data the TTL-Pin will be set.

Relay


ATTENTION



Please pay attention to the maximum switch current of 200 mA respectively the maximum switch voltage of 48V per relay output.

The following description applies for both configuration windows **Relay 1** and **Relay 2**.

FIG. 17 RELAY

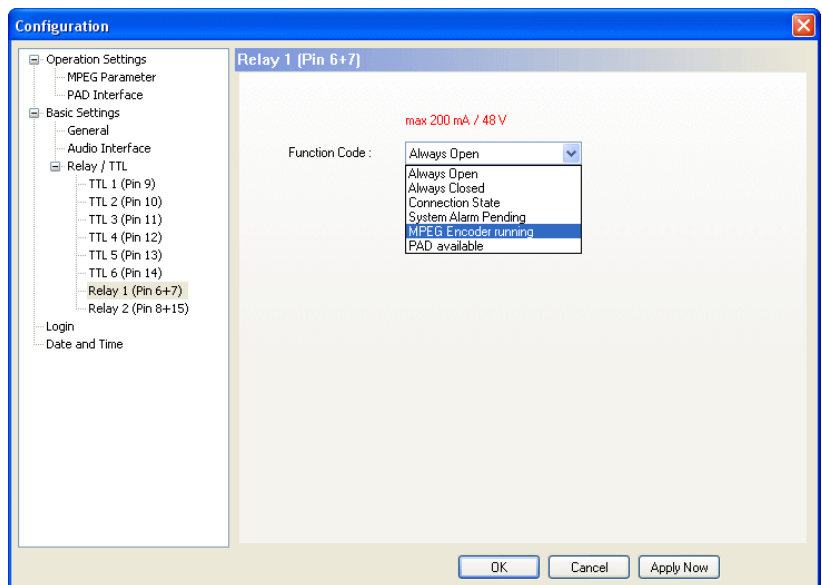

The options for the relay configuration are identical with the configuration of a TTL-Pin. The following **Function Codes** are available:

- **Always Open:** The relay is always open.
- **Always Closed:** The relay is always closed. This can be used for example for surveillance of the power supply.
- **Connection State:** Via Connection State you can signalise the connection state of a line. The following configurations are possible:
 - **Disconnect**
 - **Connect**
- **System Alarm Pending:** If one of the possible system errors (see CHAPTER 5.7.1) occurs, it can be signalised by selecting this option.
- **MPEG Encoder running:** If the encoder detect **no** error, the relay will be closed.
- **PAD available:** If the PAD insertion is activated (see CHAPTER 5.5.2.1.2, Page 36) and the encoder receives data the relay will be closed.

5.5.2.3 Login

To protect the system from re-configurations, two password levels with different user rights are available.

ATTENTION




The entered password is saved in the system. It is highly important that you enter your password carefully. If you have forgotten your password, only the AVT Service can re-activate the system.

- Under **USER** you assign the user **Password**. For safety reasons you must confirm the password under **Confirm Password**.
- Under **ADMINISTRATOR** you assign the Administrator **Password**. For safety reasons you must confirm the password under **Confirm Password**.

NOTICE


There is no differentiation between upper and lower case for the password entry.

FIG. 18 LOGIN

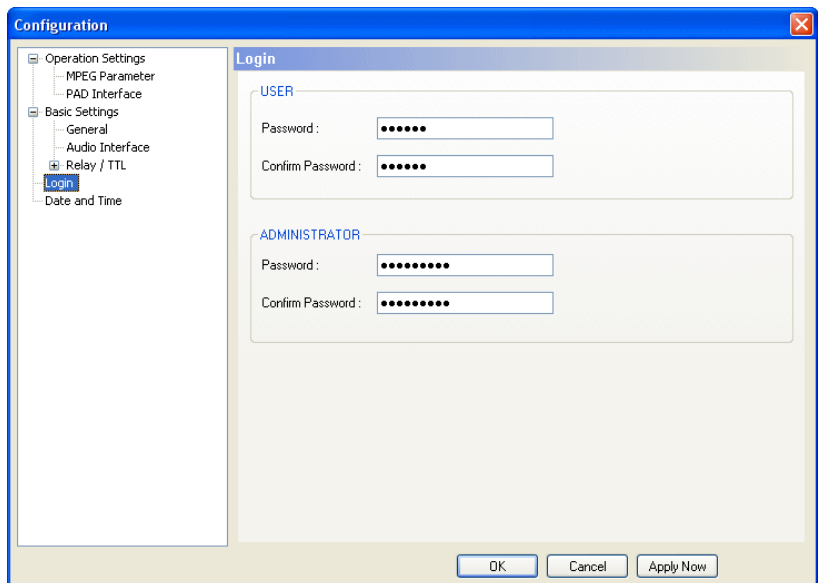

When you have assigned a password, the window for the password entry is automatically displayed when you click on a menu with password protection. Please enter the User Password or the Administrator Password.

FIG. 19 PASSWORD LOGIN

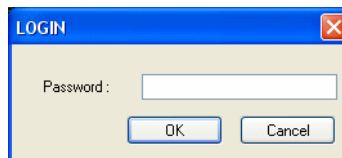

The authorisation levels are defined as follows:

- (1) Only **Administrator Password** is configured: The password must be entered for configuration changes. Immediately available menus:
 - **File** → **Operation Settings Presets** → **Export**

- **File** → **Basic Settings** → **Export**
 - **Configuration** → **Presets** → „**Configuration Name**“
 - **Administration** → **Registration**
 - **Extras** → **System Monitor**
 - **Help** → **About MAGIC AE1 DAB**
- (2) Only **User Password** is configured: The password must be entered always. Afterwards all menus are available. Immediately available menus:
- **Help** → **About MAGIC AE1 DAB**
- (3) **User Password** and **Administrator Password** are configured: The password must always be entered.

User Password is entered:

Under **Configuration** → **Configuration** → **Login** the **USER** password can now be changed.

Via **Configuration** → **Presets** the desired configuration can be loaded.

Immediately available menus:

- **Extras** → **System Monitor**

Administrator Password is entered: All menus are available.

NOTICE

Please pay attention to the configuration options of the system if a password is assigned (see CHAPTER A1).


5.5.2.4 Date and Time

Via the panel **Date and Time** it is possible set the internal clock of the system.

To synchronise the **System Time** to the **PC Time** press the button **Transmit PC Time**.

To setup another time e.g. for other time zones you can enter a **User Defined Time**. To set the time in the system press the button **Transmit User Defined Time**.

FIG. 20 DATE AND TIME

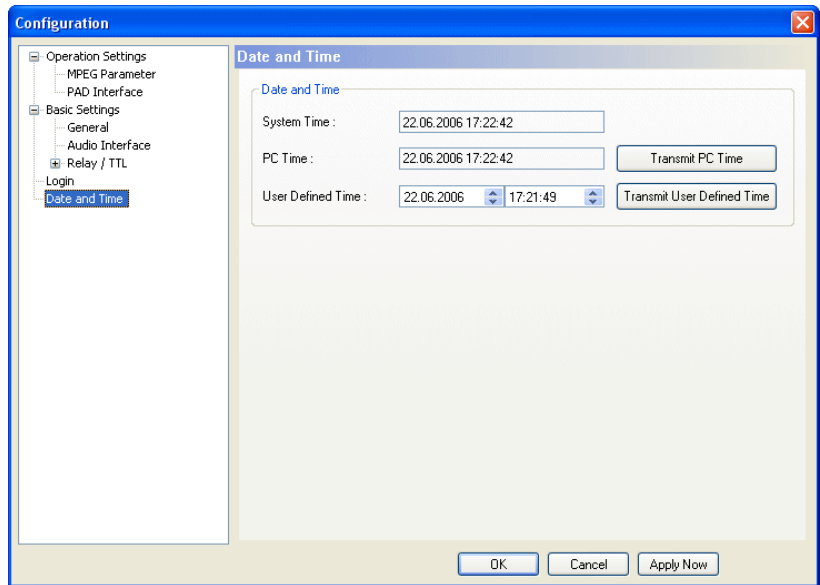

5.5.3 Submenu Presets

Via **Presets** you can load already created configurations.

5.5.3.1 Manage Presets

Your created **Presets** can be managed via the menu **Configuration** → **Presets** → **Manage Presets**.

FIG. 21 MANAGE PRESETS



All already existing configurations are displayed in the list.

- With the use of the **New** button you create a new configuration. The current configuration of the system is not changed or loaded by this function. First, select an expedient name. The length of the name must not surpass 8 characters. Special characters and space characters are **not** allowed. Please mind that you use unique names.

Subsequently, the configuration dialogue is opened for the editing of the **Presets**. The current configuration is always displayed as basis of a **Preset** which you can adjust according to your wishes. The following configurations can be saved as Preset:

- MPEG Parameter (see Page 34)
- PAD Interface (see Page 36)
- By using the button **Edit** the currently selected configuration can be edited. The current configuration of the system is not changed or loaded with this function.
- Via the button **Delete** the configuration selected from the list is deleted. For safety reasons you have to confirm your selection.
- To activate a configuration selected from the list, press the **Select** button. For safety reasons you have to confirm your selection.
- Via the button **Import** a configuration can be imported from a data carrier (disk, USB stick etc.). The file extension of the configuration file is always **.psf**. A click on the button opens the file browser in which the desired file can be selected.

- Likewise, it is possible to export configurations to a data carrier. The button **Export** saves the configuration selected from the list as **.pst** file. By clicking on the button the file browser is opened and you can choose the location where the file is saved.

With **Export All** all configurations displayed in the list are saved in a directory of your choice. A separate data file with the file extension **.pst** is generated for each configuration.

TIP

If you need to configure several systems in the same way, set up one system first and export all configurations to a disk. To configure all further systems easily, import the configurations from the disk.

This is also possible for the **Basic Settings**. Via the **Import/Export** function under **File** (see CHAPTER 5.4) you can comfortably save all information and load on other systems.


5.5.3.2 Activation of a Preset

All Presets are displayed under **Configuration** → **Presets** → „**Preset Name**“ and can be activated with a click.

For safety reasons a confirmation is required.

5.6 Menu Administration

FIG. 22 MENU ADMINISTRATION

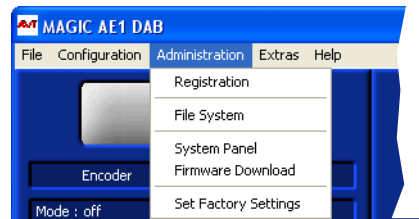

5.6.1 Submenu Registration

The data concerning production as well as the enabled options can be displayed under the submenu **Registration**.

FIG. 23 SUBMENU REGISTRATION

 The screenshot shows the 'Registration' dialog box. The 'Hardware' field contains 'MAGIC AE1 DAB'. Under the 'Main' tab, the 'Subject Number' is '450069', the 'Factory Number' is '06/25/0999' (highlighted with a red box), the 'Year' is '2006', and the 'Hardware Version' is 'G1.00'. Under the 'Features' tab, the 'Software Options' section lists:

- MAGIC AE1 DAB Basic Functionality
- MPEG Functionality
- MPEG Layer II Encoder
- Digital Audio


 At the bottom, there are 'Enter password' and 'Close' buttons.

This number is required to enable software options supplementarily

The data of the unit include the following information:

- **Hardware**
- **Subject Number**
- **Factory Number**
- **Year** of production
- **Hardware Version**
- Under **Features** the available and activated **Software Options** of the **MAGIC AE1 DAB** are displayed. Deactivated options can be activated via a password. This password is assigned according to the **Factory Number**. If you bought an option supplementarily, please enter the password that you received from us under **Enter Password**.

FIG. 24 PASSWORD ENTRY TO ENABLE AN OPTION

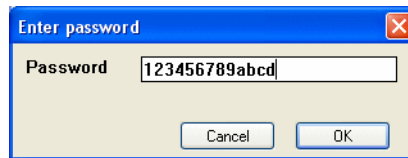

Subsequently, the system executes a warm start. Afterwards, the functions are activated.

ATTENTION



Please enter the password carefully.

If you enter a wrong password **three times**, you must switch off the system and switch it on again.

5.6.2 Submenu File System


Selecting the submenu **File System** the storage system (similar to a PC's hard drive) of the system is displayed.

ATTENTION



Please do not use the File System unless our Service requested a specific action.

FIG. 25 SUBMENU FILE SYSTEM

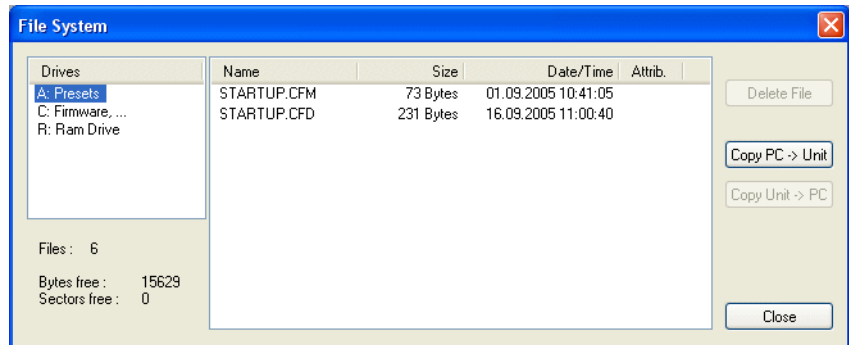

- The button **Delete File** deletes the currently selected file **from the system**.

ATTENTION



Please do not delete any file unless our Service requested a specific action. Otherwise a disfunction of the system is possible.

- Via the button **Copy PC -> Unit** you can copy a file from the PC to the system.

ATTENTION



Please use the Software Download and the File Import functionalities respectively to copy files to the system.

- Via the button **Copy Unit -> PC** you can copy a file from the system to the PC.

ATTENTION




Please use the File Export functionalities to copy files to the PC.

5.6.3 Submenu System Panel

The **System Panel** is only for service purposes. Please enter only commands in the prompt, if our Support requested it from you.

FIG. 26 SUBMENU SYSTEM PANEL

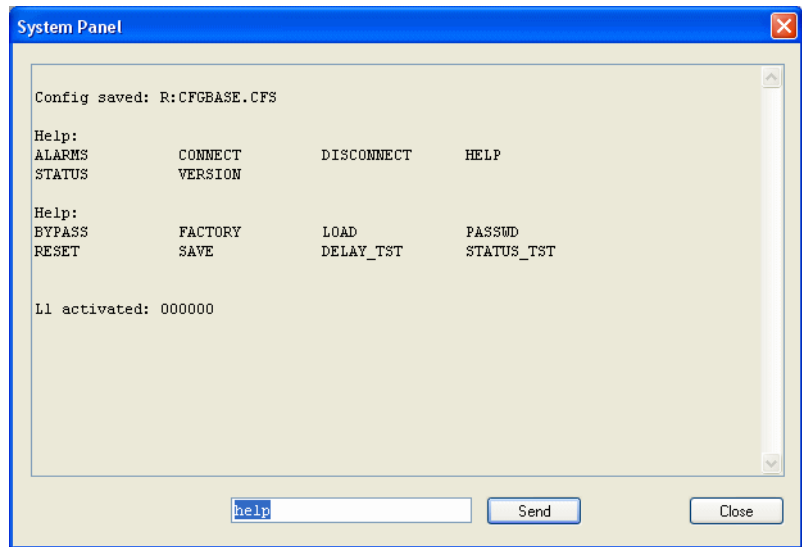

5.6.4 Submenu Software Download


The required firmware for the **MAGIC AE1 DAB** system is always included in the PC software: Via the **Software Download** you can comfortably download the firmware on your system.

By using the **Browse** button you select the firmware file. It is always located in the same directory in which you installed the **MAGIC AE1 DAB** application. The standard installation directory is:

C:\Program Files\MAGIC AE1 DAB

The file name of the firmware is „**ae1dab.ssw**“.

FIG. 27 SUBMENU SOFTWARE DOWNLOAD

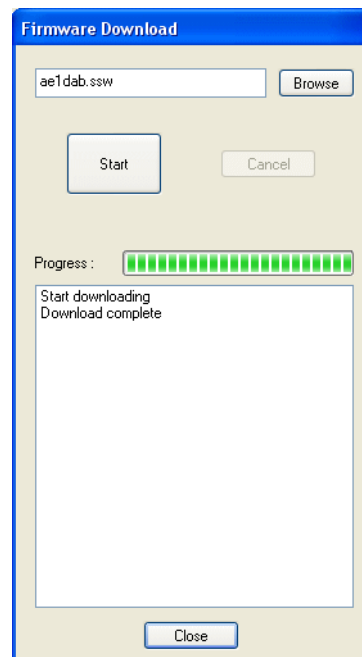

Please press the **Start** button to download the firmware. The **Progress** bar displays the progress of the download. The process is finished after about two minutes. If the download was successful, a corresponding message is displayed. After your confirmation the system is reset.

NOTICE

If the download was not successful, you can simply switch off the unit and switch it on again. The new software is only written in the flash memory if the download was successful. Otherwise the old firmware is maintained.

5.6.5 Submenu Set Factory Settings

By using the submenu **Set Factory Settings** the system can be reset to the initial state.

For safety reasons you have to confirm your selection.

5.7 Menu Extras


FIG. 28 MENU EXTRAS



5.7.1 Submenu System Monitor

Via the menu **System Monitor** you receive information about the system status.

FIG. 29 SUBMENU SYSTEM MONITOR

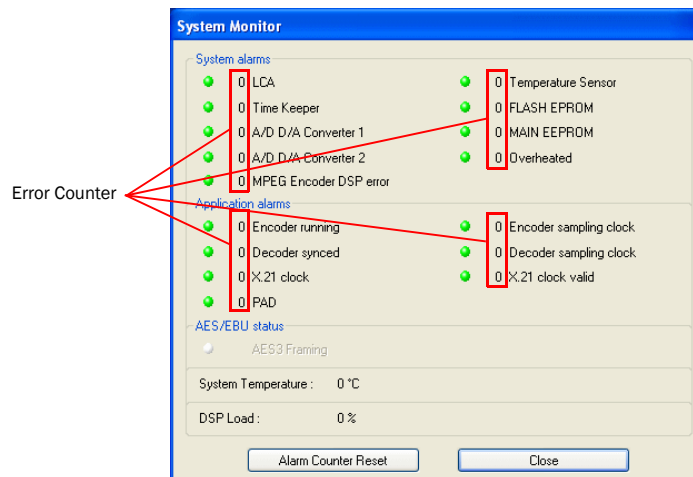

TIP

A system alarm can also be configured as relay output (see Page 40).

A red LED signals a currently existing alarm. How often the error occurred since switching on is displayed by the corresponding error counter.

To reset all error counter press the button **Alarm Counter Reset**.

NOTICE

If an alarm occurs frequently or over a longer period disconnect the unit from electricity. If the error occurs again after switching on, there is probably a hardware defect.

- Under **System alarms** all potential system alarms are displayed:
 - **LCA**: The communication with a programmable component is faulty.
 - **Time Keeper**: The communication with the integrated clock module is faulty.
 - **A/D D/A Converter 1**: The communication with the first ADDA converter is faulty.
 - **A/D D/A Converter 2**: The communication with the second ADDA converter is faulty.
 - **Temperature Sensor**: The communication with the temperature sensor is faulty.
 - **FLASH EPROM**: The communication with the permanent memory is faulty. Configurations cannot be saved or read anymore.


- **MAIN EEPROM:** The communication with the permanent memory is faulty. Configurations cannot be saved or read anymore.
- **Overheated:** The system sets this alarm if the system temperature is higher than 57 °C. Disconnect the unit from electricity or cool down the ambient temperature.
- **MPEG Encoder DSP error:** This alarm occurs, if an error on the DSP module is detected.
- Under **Application alarms** all ISO/MPEG alarms are centralised:
 - **Encoder running:** If the encoder is not running, this alarm will be set.
 - **Decoder synced:** For monitoring purposes the coded signal is decoded at any time via the integrated ISO/MPEG decoder.
 - **X.21 clock:** This alarm occurs, if the external X.21 line clock is not available.
 - **X.21 clock valid:** This alarm occurs, if the external X.21 line clock is not locked to one of the available bitrates (see TAB. 1, Page 35)
 - **PAD:** If PAD is activated, but no data are available at the PAD interface, this alarm will be set.
 - **Encoder sampling clock:** This alarm occurs if the hardware sampling clock do not fit with the expected sampling clock of the encoder.
 - **Decoder sampling clock:** This alarm occurs if the hardware sampling clock do not fit with the expected sampling clock of the decoder.
- The **AES/EBU status** shows the current status of the AES/EBU input if the digital audio input is selected (see CHAPTER 5.5.2.2.2).

The actual system temperature is displayed in °C under **System Temperature**. The regular system temperature ranges from 30...45 °C.

Under **DSP Load** the load of the system is displayed. The usual load is about 55 to 65%.

5.8 Menu Help

FIG. 30 MENU HELP



5.8.1 Submenu About MAGIC AE1 DAB

In the **About MAGIC AE1 DAB** dialogue you find the software versions of the PC software (**PC Version**) and of the systems (**Firmware Version**). Besides, you can find our contact details there.

FIG. 31 SUBMENU ABOUT MAGIC AE1 DAB



A 1 MENU STRUCTURE

On the following pages you will find the complete menu structure if you select **ENGLISH** as menu language

From the main menu you reach the phone book directly via the softkey **NUMBERS**. With the use of the softkey **MENU** you get to the configuration of the system.

The configuration menu is divided in five submenus:

- **BASIC SETTINGS**
- **OPERATION SETTINGS**
- **PRESETS**
- **STATUS INFORMATION**
- **LOGIN**

NOTICE


Please note that depending on the selected operating mode some menu items are not displayed.

If you use an Administrator and/or User Password, the display looks as it is described below:

- (1) Only **Administrator Password** configured: The password must be entered for changes to the basic settings and operation settings only. Immediately available menus:
 - **PRESETS**
 - **STATUS INFORMATION**
 - **LOGIN**
- (2) Only **User Password** configured (instead of **MENU, LOGIN** is displayed): The password must always be entered. Subsequently, all menus are available.
- (3) **User** and **Administrator Password** configured (instead of **MENU LOGIN** is displayed):
 - **User Password** is entered: The menus **PRESETS, STATUS INFORMATION** and **LOGIN** are available
 - **Administrator Password** is entered: All menus are available.


NOTICE


There is no differentiation between upper and lower case for the password entry.

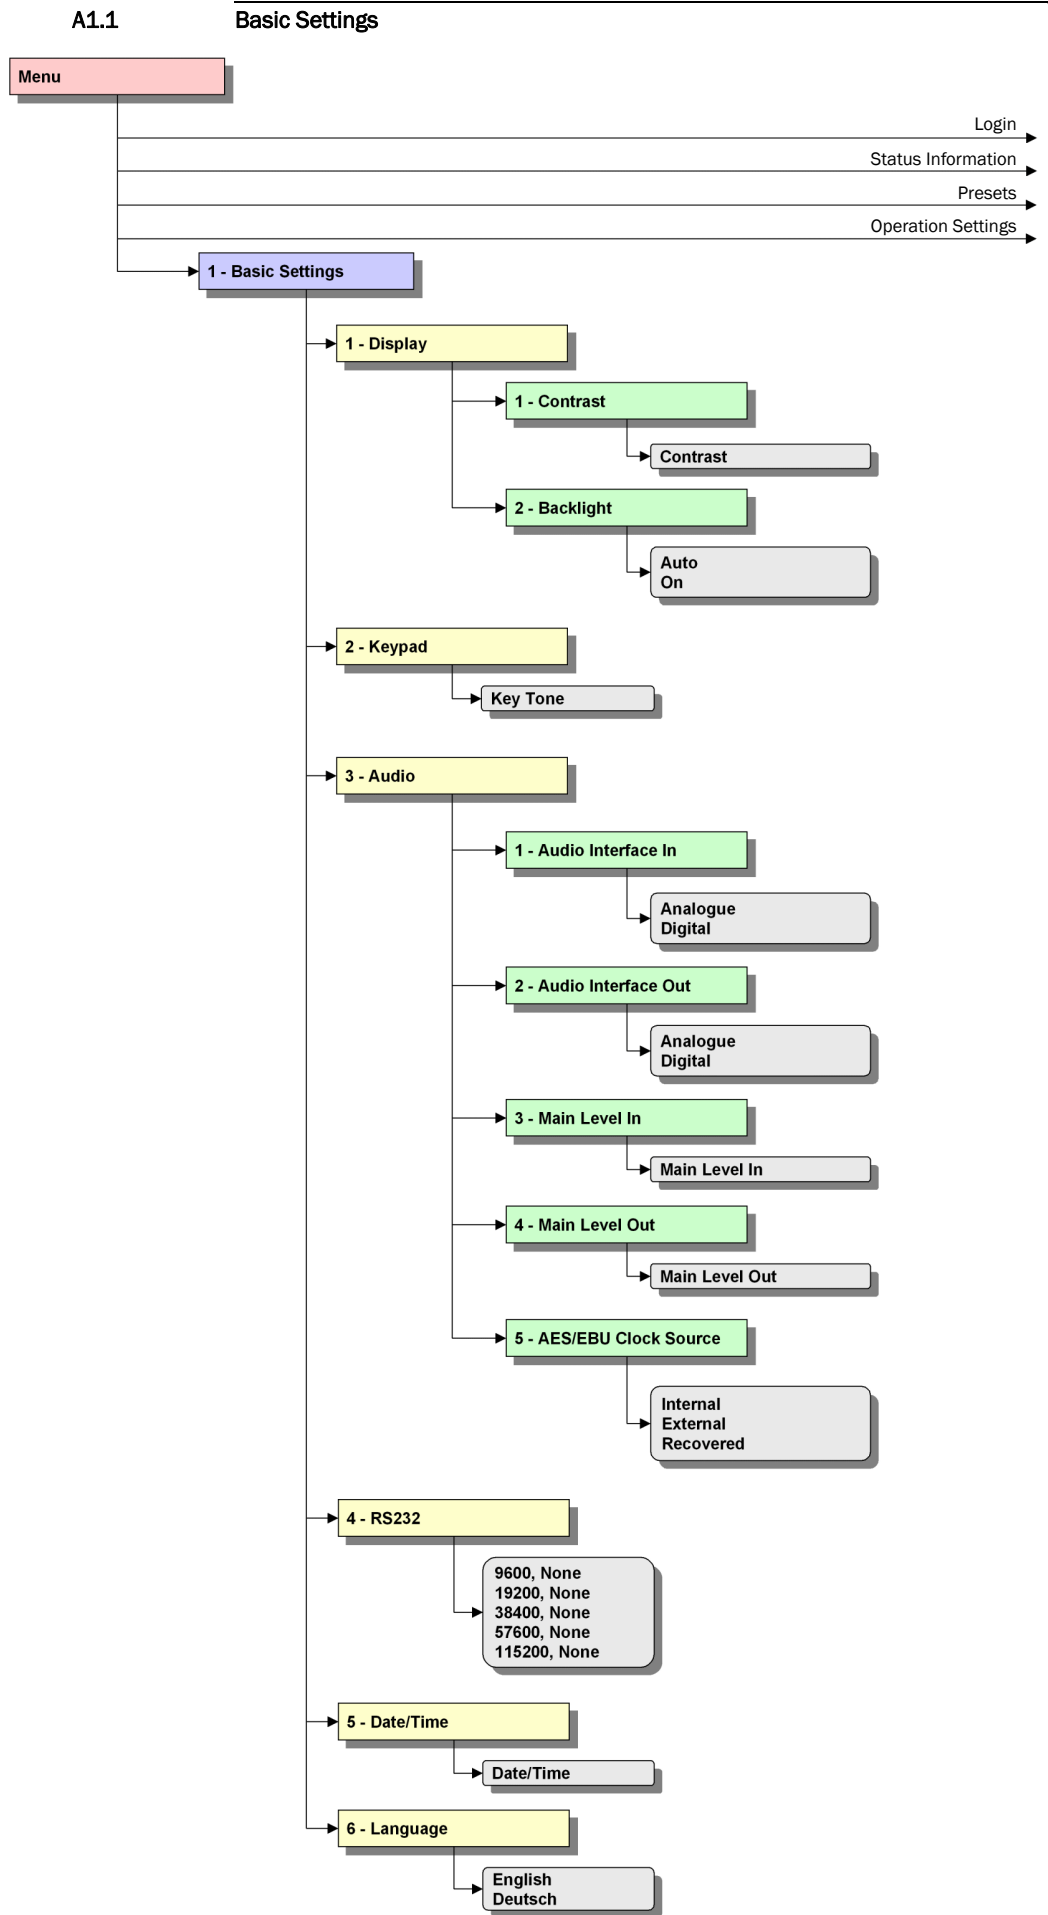

A1.2


Operation Settings

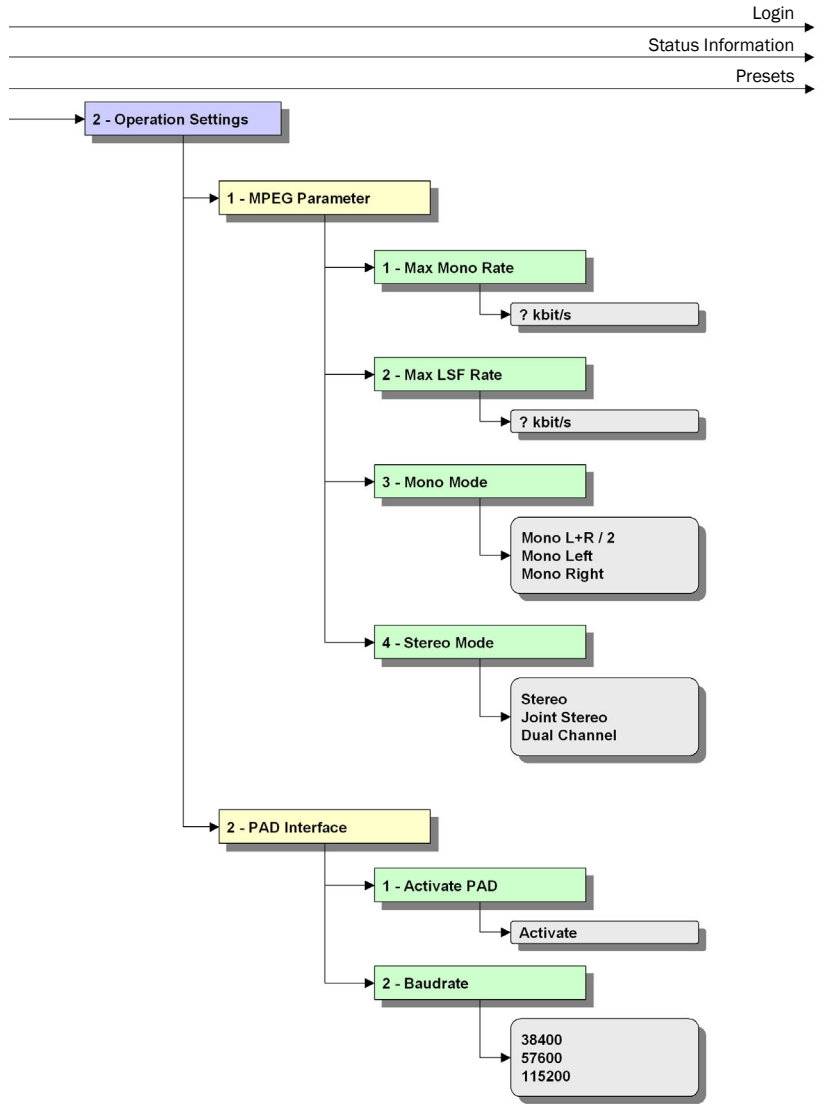

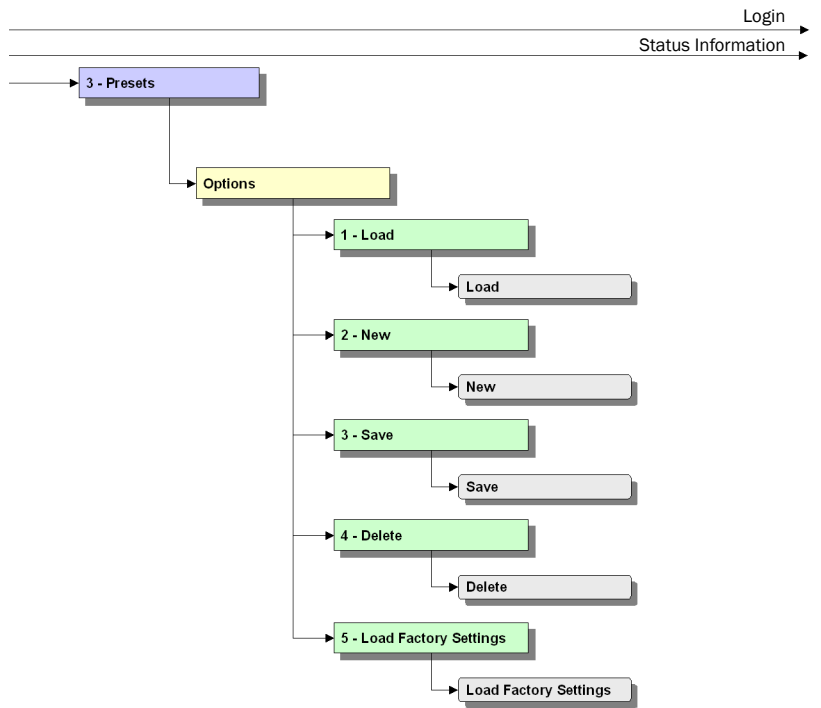


A1.4

Status Information

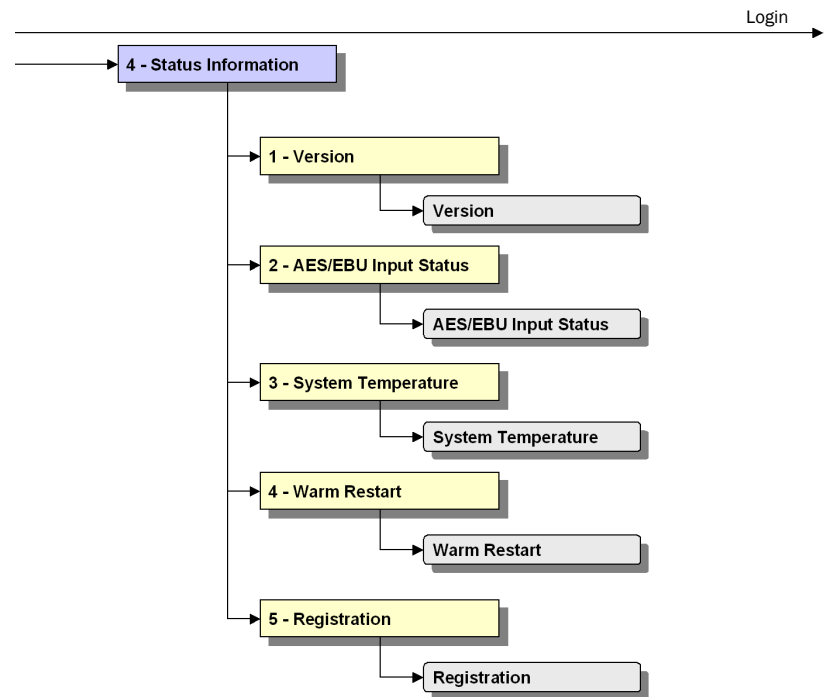

A1.5


Login

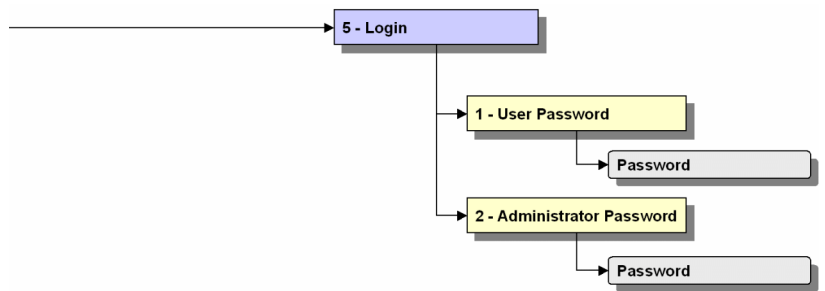

A 2 INTERFACES

The interfaces of the system are pictured in Fig. 32.

FIG. 32 REAR VIEW OF THE MAGIC AE1 DAB AUDIO ENCODER

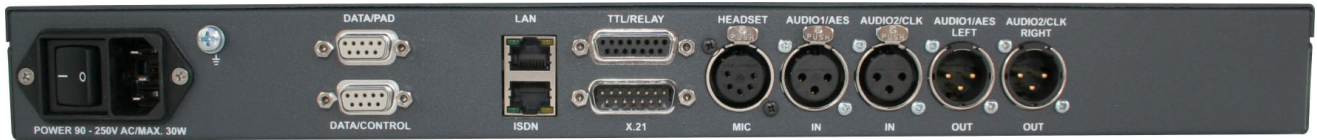

All interfaces are described below.

A2.1 Control and data interfaces


A2.1.1 DATA/CONTROL interface

The DATA/CONTROL interface is used for the configuration and operation of the **MAGIC AE1 DAB** system via a PC.

To connect a PC you need a 1:1 connecting cable in which Pin 2 and Pin 3 are **not** crossed. Furthermore, Pin 5 GND must be connected.

NOTICE

Please note that the function of the Pins RXD and TXD - input or output - is determined by the interface type DCE or DTE. The pin assignment for Pin 2 is always RXD and for Pin 3 it is always TXD.



TAB. 2 PIN ASSIGNMENT: DATA/CONTROL INTERFACE

Socket: SUB-D, 9-pole

Pin	Signal	Electrical characteristics
1	not used	PC interface RS232: Type (Pin 2, 3): DCE ^a Level: V.24 Data rate: 115200 Baud Range: max. 15 m Protocol: programmable
2	RXD ^b PAD Receive Data	
3	TXD ^c PAD Transmit Data	
4	not used	
5	GND Earth	
6	not used	
7	not used	
8	not used	
9	not used	

a DCE = Data Communication Equipment: to connect a PC a 1:1 cable is required

b ATTENTION: On this Pin the MAGIC AE1 DAB **transmits** data

c ATTENTION: On this Pin the MAGIC AE1 DAB **receives** data

A2.1.2 DATA/PAD interface

The DATA/PAD interface is used for the transmission of Program Associated Data (PAD). The interface is realised compliant to *IRT Recommendation*¹.

ATTENTION




Please note that the maximum number of PAD bytes per frame is 127. In this case a baudrate of 115200 Baud must be configured.

To connect a standard PAD inserter you need a 1:1 connecting cable in which Pin 2 and Pin 3 are *not* crossed. Furthermore, Pin 5 GND must be connected.

NOTICE

Please note that the function of the Pins RXD and TXD - input or output - is determined by the interface type DCE or DTE. The pin assignment for Pin 2 is always RXD and for Pin 3 it is always TXD.



TAB. 3 PIN ASSIGNMENT: DATA/PAD INTERFACE

Socket: SUB-D, 9-pole

Pin	Signal	Electrical characteristics
1	not used	PC interface RS232: Type (Pin 2, 3): DCE ^a Level: V.24 Data rate: 115200 Baud Range: max. 15 m Protocol: programmable
2	RXD ^b PAD Receive Data	
3	TXD ^c PAD Transmit Data	
4	not used	
5	GND Earth	
6	not used	
7	not used	
8	not used	
9	not used	

- a DCE = Data Communication Equipment: to connect a PC a 1:1 cable is required
- b ATTENTION: On this Pin the MAGIC AE1 DAB **transmits** data
- c ATTENTION: On this Pin the MAGIC AE1 DAB **receives** data


¹ Synchronous transmission mode: In the beginning of each ISO/MPEG frame the encoder transmit a SYN character (0x16). To realise frame synchronous PAD insertion the connected PAD inserter must transmit all data inside of this frame.

A2.2

ISDN interface

NOTICE

This interface is not supported in the *MAGIC AE1 DAB* system.



TAB. 4 PIN ASSIGNMENT: S₀ INTERFACE (ISDN)

Socket: Western (8-pole) RJ45

Pin	Signal	Electrical characteristics
1	not used	Recommendation: I.430 Data rate: B channel: 2 x 64-kbit/s D channel: 16-kbit/s Max. cable length: 100 m
2	not used	
3	TX (A) Data out (A)	
4	RX (A) Data in (A)	
5	RX (B) Data in (B)	
6	TX (B) Data out (B)	
7	not used	
8	not used	


A2.3

LAN interface

The LAN interface can be used for control and monitoring purposes.

NOTICE

The implementation of the LAN interface is planned for a later release.



TAB. 5 PIN ASSIGNMENT: S₀ INTERFACE (ISDN)


Socket: Western (8-pole) RJ45

Pin	Signal	Electrical characteristics
1	TX (A) Data out (A)	Standard Ethernet /10Base-T (IEEE-802.3) Speed: 10 MBit/s Cable type: Twisted Pair (CAT3) Max. cable length: 100 m
2	TX (B) Data out (B)	
3	RX (A) Data in (A)	Fast Ethernet /100Base-T (IEEE-802.3u) Speed: 100 MBit/s Cable type: Twisted Pair (min. CAT5) Max. cable length: 100 m
4	not used	
5	not used	
6	RX (B) Data in (B)	
7	not used	
8	not used	

A2.4

X.21 interface

The X.21 interface is realised as DCE (Data Communications Equipment) interface. The **MAGIC AE1 DAB** can be connected via an X.21 cable (part of the delivery) directly to the Ensemble Multiplexer (e.g. DM-001 from Rohde & Schwarz).



TAB. 6 PIN ASSIGNMENT: X.21 INTERFACE

Connector: 15-pole SUB-D


Pin	Signal	Direction	Electrical characteristics
1	SHIELD Screen		Type: DCE with Gender Changer
2	TX (A) Transmit Data (A)	In	Level: V.11, balanced
3	CTL (A) Control (A)	In	Data rates: 8, 16, 24, 32, 40,
4	RX (A) Receive Data (A)	Out	48, 56, 64, 80,
5	IND (A) Indicate (A)	Out	96, 112, 128,
6	SCLK (A) Signal Element Timing (A)	Out	144, 160, 192,
7	BCLK (A) ^a Byte Timing (A)	Out	224, 256, 320,
8	GND Ground		384-kbit/s
9	TX (B) Transmit Data (B)	In	Range: 100 m
10	CTL (B) Control (B)	In	
11	RX (B) Receive Data (B)	Out	
12	IND (B) Indicate (B)	Out	
13	SCLK (B) Signal Element Timing (B)	Out	
14	BCLK (B) ^a Byte Timing (B)	Out	
15	not used		

a Normally not used

A2.5

TTL/RELAY interface

Via this interface external control signals can be used. The programming of the available functions is possible via the Windows PC Software.



TAB. 7 PIN ASSIGNMENT: TTL/RELAY INTERFACE


Socket: 15-pole SUB-D

Pin	Signal	Direction	Electrical characteristics
1	not used		Specification of the TTL outputs: Maximum voltage: 5V Maximum current: 10mA
2	not used		
3	not used		
4	not used		
5	GND		Specification of the relays: Maximum voltage: 48V Maximum current: 200mA
6	RELAY 1 (A)	Out	
7	RELAY 1 (B)	Out	
8	RELAY 2 (A)	Out	
9	TTL1	In/Out	
10	TTL2	In/Out	
11	TTL3	In/Out	
12	TTL4	In/Out	
13	TTL5	In/Out	
14	TTL6	In/Out	
15	RELAY 2 (B)	Out	

A2.6 Audio interfaces

The system incorporates analogue and digital AES/EBU audio interfaces. For switching you can use display and keypad or the Windows PC software. The output interfaces can be used for monitoring purposes.


A2.6.1 Analogue Audio interface

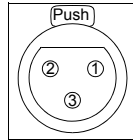

TAB. 8 PIN ASSIGNMENT: ANALOGUE INPUT (AUDIO 1/2 IN)

Socket: 3-pole XLR

Pin	Signal	Electrical characteristics
1	GND	Input level: adjustable -3 +9 dBu
2	AUDIO IN (A)	Impedance: > 25 kΩ
3	AUDIO IN (B)	Head room: 6 dB

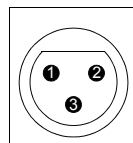


TAB. 9 PIN ASSIGNMENT: ANALOGUE OUTPUT (AUDIO 1/2 OUT)

Connector: 3-pole XLR

Pin	Signal	Electrical characteristics
1	GND	Output level: adjustable -3 +9 dBu
2	AUDIO OUT (A)	Impedance: < 50 Ω
3	AUDIO OUT (B)	Head room: 6 dB

A2.6.2 Digital AES/EBU Audio interface


The **MAGIC AE1 DAB** system incorporates a digital AES/EBU input and output. The input as well as the output has its own sample rate converter providing that a digital source with 32, 44.1 or 48-kHz can be connected directly. For external clocking (48-kHz only) the word clock input or output may be used.

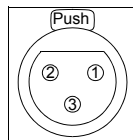

TAB. 10 PIN ASSIGNMENT: DIGITAL INPUT (AES IN)

Socket: 3-pole XLR

Pin	Signal	Electrical characteristics
1	GND	IEC-958
2	AUDIO IN (A)	
3	AUDIO IN (B)	

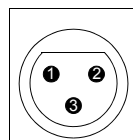


TAB. 11 PIN ASSIGNMENT: DIGITAL OUTPUT (AES OUT)

Connector: 3-pole XLR


Pin	Signal	Electrical characteristics
1	GND	IEC-958
2	AUDIO OUT (A)	
3	AUDIO OUT (B)	

A2.6.2.1 Digital AES/EBU Clock interface

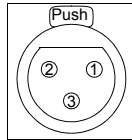

TAB. 12 PIN ASSIGNMENT: CLOCK INPUT (CLK IN)

Socket: 3-pole XLR		
Pin	Signal	Electrical characteristics
1	GND	TTL
2	CLOCK IN	
3	not used	

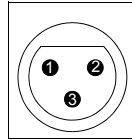

TAB. 13 PIN ASSIGNMENT: CLOCK OUTPUT (CLK OUT)


Connector: 3-pole XLR		
Pin	Signal	Electrical characteristics
1	GND	TTL
2	CLOCK OUT	
3	not used	

A2.6.3 HEADSET/MIC interface

This interface allows a monitoring of the decoded audio signal as well as the audio inputs.

NOTICE

The microphone input is not available in this system.

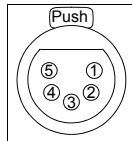

TAB. 14 PIN ASSIGNMENT: HEADSET/MICRO AUDIO INTERFACE

Socket: 5-pole XLR		
Pin	Signal	Electrical characteristics
1	not used	Output Power: 0,15 W Load (Min.): 8 Ω THD+N@1kHz: 0,25% (half power) PSRR ^a : 83 dB Level adjustment: 0 ... -40 dB
2	not used	
3	GND	
4	HEADPHONE left channel	
5	HEADPHONE right channel	

^a PSRR: Power Supply Rejection Ratio

A 3 TECHNICAL DATA

Coding Algorithm

ISO/MPEG Layer II (IRT Licence)
DAB EN 300401

Sampling Frequencies:

24-kHz, 48-kHz

Data Rates:

8, 16, 24, 32, 40, 48, 56, 64, 80, 96, 112-kbit/s
128, 144, 160, 192, 224, 256, 320, 384-kbit/s

Audio Interface Encoder:

XLR, analogue, electronically balanced
digital AES/EBU with integrated Sample Rate Converter

Audio Level:

-3 ... +9 dBu

Headroom:

6 dB (maximum level: 15 dBu)

Impedance:

600 Ohm/15 KOhm

THD+N:

~86 dB

Linearity:

± 0,3 dB

Monitoring Output:

XLR, analogue, electronically balanced
digital AES/EBU with integrated Sample Rate Converter
Headphones output

Line Interfaces:

X.21¹

Data Interfaces:

PAD	V.24/RS232 IRT Rec. compliant 38400, 57600, 115200 Baud max. 127 bytes per frame @ 115200 Baud
-----	--

Control Interface:

LAN ²	
PC	V.24/RS232
GPIO	6 x TTL programmable 2 x Relays, programmable

Power Supply:

90...253V AC

Frequency:

50/60 Hz

Power Consumption:

typical 12W, max. 15W

Dimensions (H x W x D):

45 (1U) x 451 x 250 mm
with brackets system fits into a 19" rack

¹ ISDN interface is not in use

² planned for a later release

A 4 GENERAL

A4.1 Ordering numbers

MAGIC AE1 DAB 800401

Accessories

-

Software Options

-

A4.2 Scope of delivery

- MAGIC AE1 DAB
 - CD MAGIC AE1 DAB Updates (ID: 430283)
 - Mains power supply cable
 - RS232 cable
 - X.21 interface cable 15-pole SUB-D, 2 x Socket
 - 19" Mounting Brackets
 - Manual

A4.3 Declaration of Conformity

You will find the declaration of conformity at the end of this manual.

A 5 SERVICE INFORMATION

A5.1 Software Updates

Free Software Updates you will find on our Homepage under

<http://www.avt-nbg.de>

Ident No.: 430282

A5.2 Support

You can contact our Support via email or by telephone:

support@avt-nbg.de

+49 911 5271-160 (09:00h - 17:00h)

To deal with your problem efficiently please note the factory number of the unit as well as the software version that you use.

A5.3 Repairs

If, contrary to expectations, your unit is defective please fill in the attached status report and send the unit to the following address:

**AVT Audio Video Technologies GmbH
- Repairs -
Nordostpark 12
D-90411 Nuernberg
Germany**

INDEX

Symbols

.pst 47, 48

Numerics

1 U 15
 115200 25, 33
 19 " 19
 19" rack 15
 19-inch-rack 19
 38400 25
 57600 25, 33
 9600 33

A

A/D D/A Converter 1 55
 A/D D/A Converter 2 55
 About MAGIC AE1 DAB 57
 Accessories 75
 Activate PAD 25, 36
 Active 25
 Administrator 44, 59
 ae1dab.ssw 53
 AES/EBU 24, 56, 71
 AES/EBU Interface 39
 AES/EBU status 56
 Air humidity 19
 Alarm 55
 Alarm Counter Reset 55
 Ambient temperature 19
 Analogue 24, 25, 39
 Audio 1/AES IN 39
 Audio 2/CLK IN 39
 Audio 2/CLK OUT 39
 Audio Input 39
 Audio input 24, 25
 Audio interface 24
 Audio Output 39
 Audio output 24, 25
 Audio settings 24, 25
 Auto 37

B

Backlight 37
 Basic configurations 23
 Basic Settings 37
 Baudrate 25

Browse 53

C

character 47
 Clock 39
 Clock Source of digital output 39
 COM Port 33
 COM-Port 29
 Configuration 29, 33, 34, 44, 47, 59
 Confirm Password 44
 Connect 42, 43
 Connecting cable 66, 67
 Connection Status 42, 43
 contact information 57
 Contrast 37
 Conventions 14

D

Data Bits 33
 Date/Time 27
 Deactivation 23
 Declaration of Conformity 75, 83
 Decoder not synced 56
 Decoder running 56
 Decoder sampling clock 56
 Delete 47
 Delete Preset 27
 Desktop device 19
 Digital 24, 39
 Direction 40
 Disconnect 42, 43
 Display 20, 37, 71
 Display illumination 23
 Download 53
 Dropping 26
 DSP Load 56
 DTE 66, 67
 Dual Channel 25, 35

E

Earthing 19
 Earthing screw 19
 edge change 40
 Edit 47
 Email 77
 EMC 19

Enabled 37
 Encoder running 56
 Encoder sampling clock 56
 English 59
 Enter Password 49
 error counter 55
 Exit 32
 Export 32, 48
 Export All 48
 External 39
 External Power Supply 30
 Extras 45

F

Factory Number 49
 Factory Settings 54
 Features 49
 Firmware 53
 Firmware Version 57
 Fixed to High (5V) 42, 43
 FLASH EPROM 55
 Flash memory 53
 Front view 15, 30
 Function Code 40, 42, 43
 Functional elements 17

G

GPIO 40

H

Hardware error 55
 Hardware requirements 29
 Hardware Version 49
 Headphone 31
 Headroom 19, 71
 Homepage 77
 Hotline 77

I

Import 32, 47, 48
 Input 31, 40
 Install Software 29
 Installation 29
 Interface 65
 Internal 39
 IRT 36

J

Joint Stereo 25, 35

K

Key Tone 37

Keypad 71
 Keypad (9600 Baud) 37
 keypad lock 37

L

LCA 55
 Level In 39
 Level Out 39
 Load 27
 Load Preset 40
 Login 45, 59
 LSF 34

M

MAGIC AE1 DAB Software 23
 MAIN EEPROM 56
 Main menu 23, 26, 59
 Mains voltage 19
 Manage Presets 47
 Max LSF Rate 24
 Max Mono Rate 24
 Max. LSF Bitrate 34
 Max. Mono Bitrate 34
 Menu 37, 59
 Menu structure 23, 59
 Minimum requirements 29
 Monitoring 31
 Mono (L+R)/2 35
 Mono L 34
 Mono L+R/2 25
 Mono Left 25
 Mono Mode 25
 Mono R 35
 Mono Right 25
 Mounting brackets 19
 MPEG Parameter 24, 25

N

Names 59
 Navigation 20
 Negative edge 40
 New 27, 47
 NO CONNECTION 30

O

On 37
 ON AIR Nominal Level 39
 Operating buttons 20
 Operation 13
 Operation settings 59
 Operation Settings Presets 32
 Operational elements 20
 Options 49
 Ordering numbers 75
 Output 31, 40, 42

Overheated 56

P

PAD 36
 PAD Interface 25
 Parity 33
 Password 44, 49, 59
 PC 66
 PC (19200 Baud) 33, 37
 PC (38400 Baud) 33
 PC Offline 30
 PC ONLINE 30
 PC Online 30
 PC ONLINE ALARM 30
 PC Software 71
 PC Version 57
 Phone book 59
 Port 33
 Positive edge 40, 42
 POTS 66
 POTS interface 66
 Power consumption 19
 Preset 27, 34, 37, 40
 Preset menu 27
 Presets 27, 45, 47, 59
 Program 31
 Program Name 31
 Progress 53
 Putting the system into operation
 27

Q

QuickMenu 23

R

Rack 19
 Recovered 39
 Registration 49
 Relay 70
 Relay 1 43
 Relay 2 43
 Relay output 43
 Relays 40
 Repairs 77
 Resolution 20
 RS232 33

S

S0 interface 68
 Safety instructions 13
 Sample Rate Converter 24, 39,
 71
 Save 27
 Scope of delivery 75
 Select 47

Serial cable 29
 Service 52
 Set Audio Line 40
 Setup 29
 setup.exe 29
 Softkey 20
 Software 23, 77
 Software Download 53
 Software Options 49
 Software Updates 77
 Software Versions 57
 space 47
 Standby mode 19
 Start 53
 Status 42, 43
 Status information 59
 Stereo 25, 35
 Stereo Mode 25
 Stop Bits 33
 Storage 13
 Subject Number 49
 Support 52, 77
 switch current 42
 switch voltage 42
 synchronous 39
 System Alarm 42, 43
 System alarm 55
 System alarms 55
 System Monitor 30, 45, 55
 System Panel 52
 System settings 24, 25, 59
 System Temperature 56
 System temperature 19

T

temperature 56
 Temperature Sensor 55
 Threshold values 19
 Time Keeper 55
 Transmission clock 24
 Transport 13
 TTL 40, 42, 43, 70
 TTL1 40
 TTL2 40
 TTL3 40

U

Updates 77
 USB Stick 47
 User 44, 59
 User Rights 44

V

Ventilation 19
 Version 57

W

Warm start 50
Warranty claim 19

X

X.21 clock 34, 56

Y

Year 49



DECLARATION OF CONFORMITY

Supplier's name: AVT Audio Video Technologies GmbH

Supplier's address: Nordostpark 12
D-90411 Nuernberg
Germany

declares, that the product

Product name(s): MAGIC AE1 DAB

conforms to the standards of the following European directives:

Number/title: EN 60950 A4 Safety

The conformity is evidenced by strictly meeting the following standards:

Harmonized Standards: EN 55022, EN 55024,
EN 300386,
FCC Part 15 B

Place, date: Nuernberg, 20.06.2006

Name: Wilfried HECHT (Managing Director)

Legally binding signatures:

Phone: +49 911 5271-0

This declaration includes no warranty of properties.

The safety instructions specified in the product documentation delivered must be observed.

